


Series 2000 - Model 2103

Electronic Load

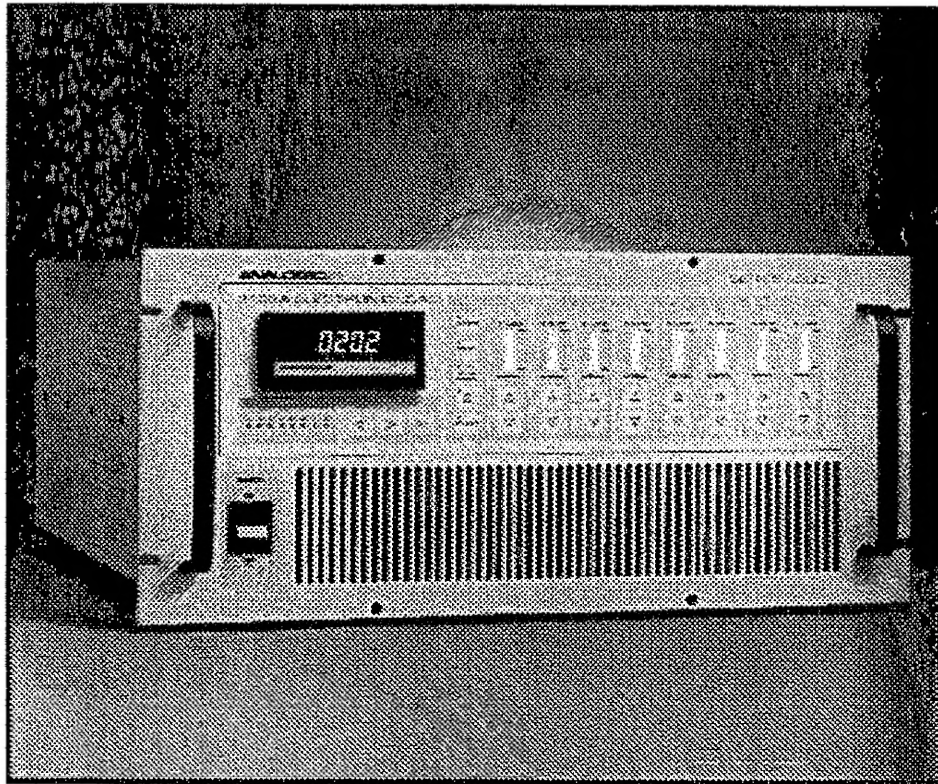

USER'S MANUAL

Proprietary Statement

The information contained in this publication is the proprietary property of Analogic Corporation. This information has been prepared for the express purpose of assisting operating and maintenance personnel in the efficient use of the instrument described herein. Publication of this information does not convey any rights to reproduce it or to use it for any purpose other than in connection with the installation, operation, and maintenance of the equipment described herein.

© Analogic Corporation 1992, 1995, 1998.

All rights reserved.

Printed in U.S.A.

Warranty

Analogic warrants only to the original purchaser that this Series 2000 Electronic Load, as purchased from Analogic or any of its distributors or dealers, will conform to the written specification for a period of one year from the date of purchase. If the product fails to conform to these warranties, Analogic, as its sole and exclusive liability hereunder, will repair or replace the product and/or its components within a reasonable period of time if the product is returned to Analogic's facility at Peabody, MA, within the warranty period as expressed above. These warranties are made upon the express condition that:

- a. The purchaser promptly notifies Analogic in writing of any non-conformity with the above warranty including a detailed explanation of the alleged deficiencies.
- b. The product is returned to Analogic at the buyer's expense only after obtaining the proper authorization from Analogic.
- c. When the product is returned for repair, a copy of the original bill of sale or invoice is sent with the product.
- d. In the opinion of Analogic upon inspection, the product has not been misused, altered, or damaged due to abnormal handling and/or operation.
- e. Repairs to the product and/or its components have not been made by anyone other than Analogic or one of its authorized repair agents.
- f. The product has not been modified, altered, or changed in any manner by anyone other than Analogic or one of its authorized repair agents.

THIS WARRANTY EXCLUDES ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED, ORAL OR WRITTEN, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE. ANALOGIC WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

No term, condition, understanding or agreement purporting to modify the terms of this warranty shall have any legal effect unless made in writing and signed by an authorized officer of Analogic and the purchaser.

Table of Contents

Chapter 1 — Introduction and Overview

Description of Product	1-1
Capabilities	1-1
Model 2103 Block Diagram	1-2
Front Panel Keyboard Description	1-4

Chapter 2 — Product Specifications

Dimensions and Weight	2-1
Operating Conditions	2-1
Current Mode	2-1
Resistive Mode	2-1
Current Measurement	2-2
Voltage Measurement	2-2
External Modulation Interface	2-3
Analog Measurement Out	2-3

Chapter 3 — Installation

Model 2103 Rear Panel Description	3-1
Load Interface and Remote Sense Connectors	3-2
Input Power Requirements	3-3

Chapter 4 — Operating Instructions

Local (front panel) Operation	4-1
Remote (GPIB) Operation (optional)	4-3

Chapter 5 — Calibration

Appendix A — Unit Schematics

LIST OF FIGURES

Figure 1-1. Model 2103 Electronic Load Block Diagram	1-2
Figure 1-2. Model 2103 Electronic Load Front Panel	1-3
Figure 2-1. Current Derating Curve	2-5
Figure 2-2. Power Derating Curve	2-6
Figure 3-1. Model 2103 Electronic Load Rear Panel	3-4

Chapter 1

Introduction and Overview

Description

The Model 2103A Electronic Load is a self-contained modular DC load which provides a flexible cost effective solution for many power test applications. Combined with a programmable AC source and some supervisory software/PC computer, it becomes a "mini-tester" for multiple output switching and linear power supplies. The 2103A contains a sophisticated new control and measuring system which may be operated via the front panel or reported over the GPIB bus with an optional IEEE-488 interface. Available with 8 channels, this unit is an ideal solution for high volume burn-in applications. In addition to constant current and constant resistance modes of operation, the 2103A has some dynamic capabilities.

Capabilities

The multi-channel electronic load unit is available with 8 channels. Each channel provides up to 50 amps, 250 watts with voltages ranging between 4 to 150 VDC and is independently configurable. Two basic modes of operation are available on each channel: constant current and constant resistance. Load configuration options allow the user to define exactly what is needed for a particular test problem. For example, constant current and constant resistance modes as well as external modulation are user selectable.

Channels may be paralleled to increase the current handling capability to 400 amps or 2000 watts per electronic load.

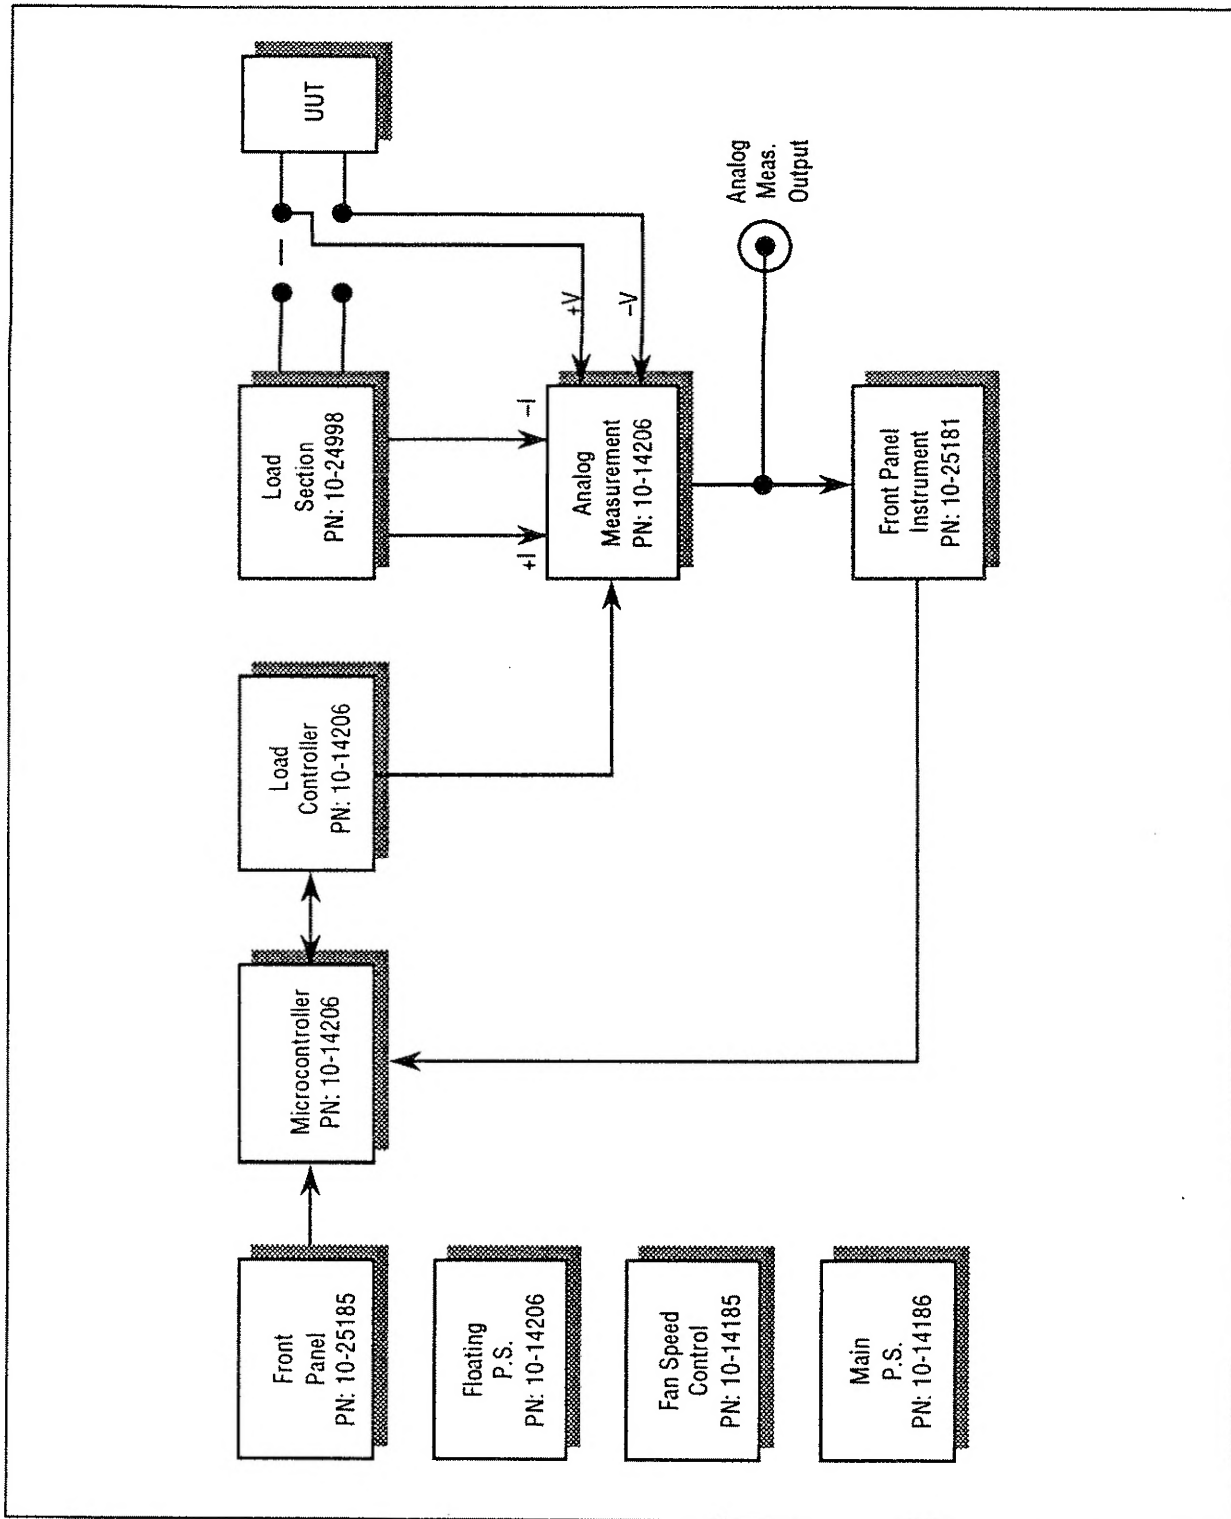


Figure 1-1. Model 2103A System Block Diagram.

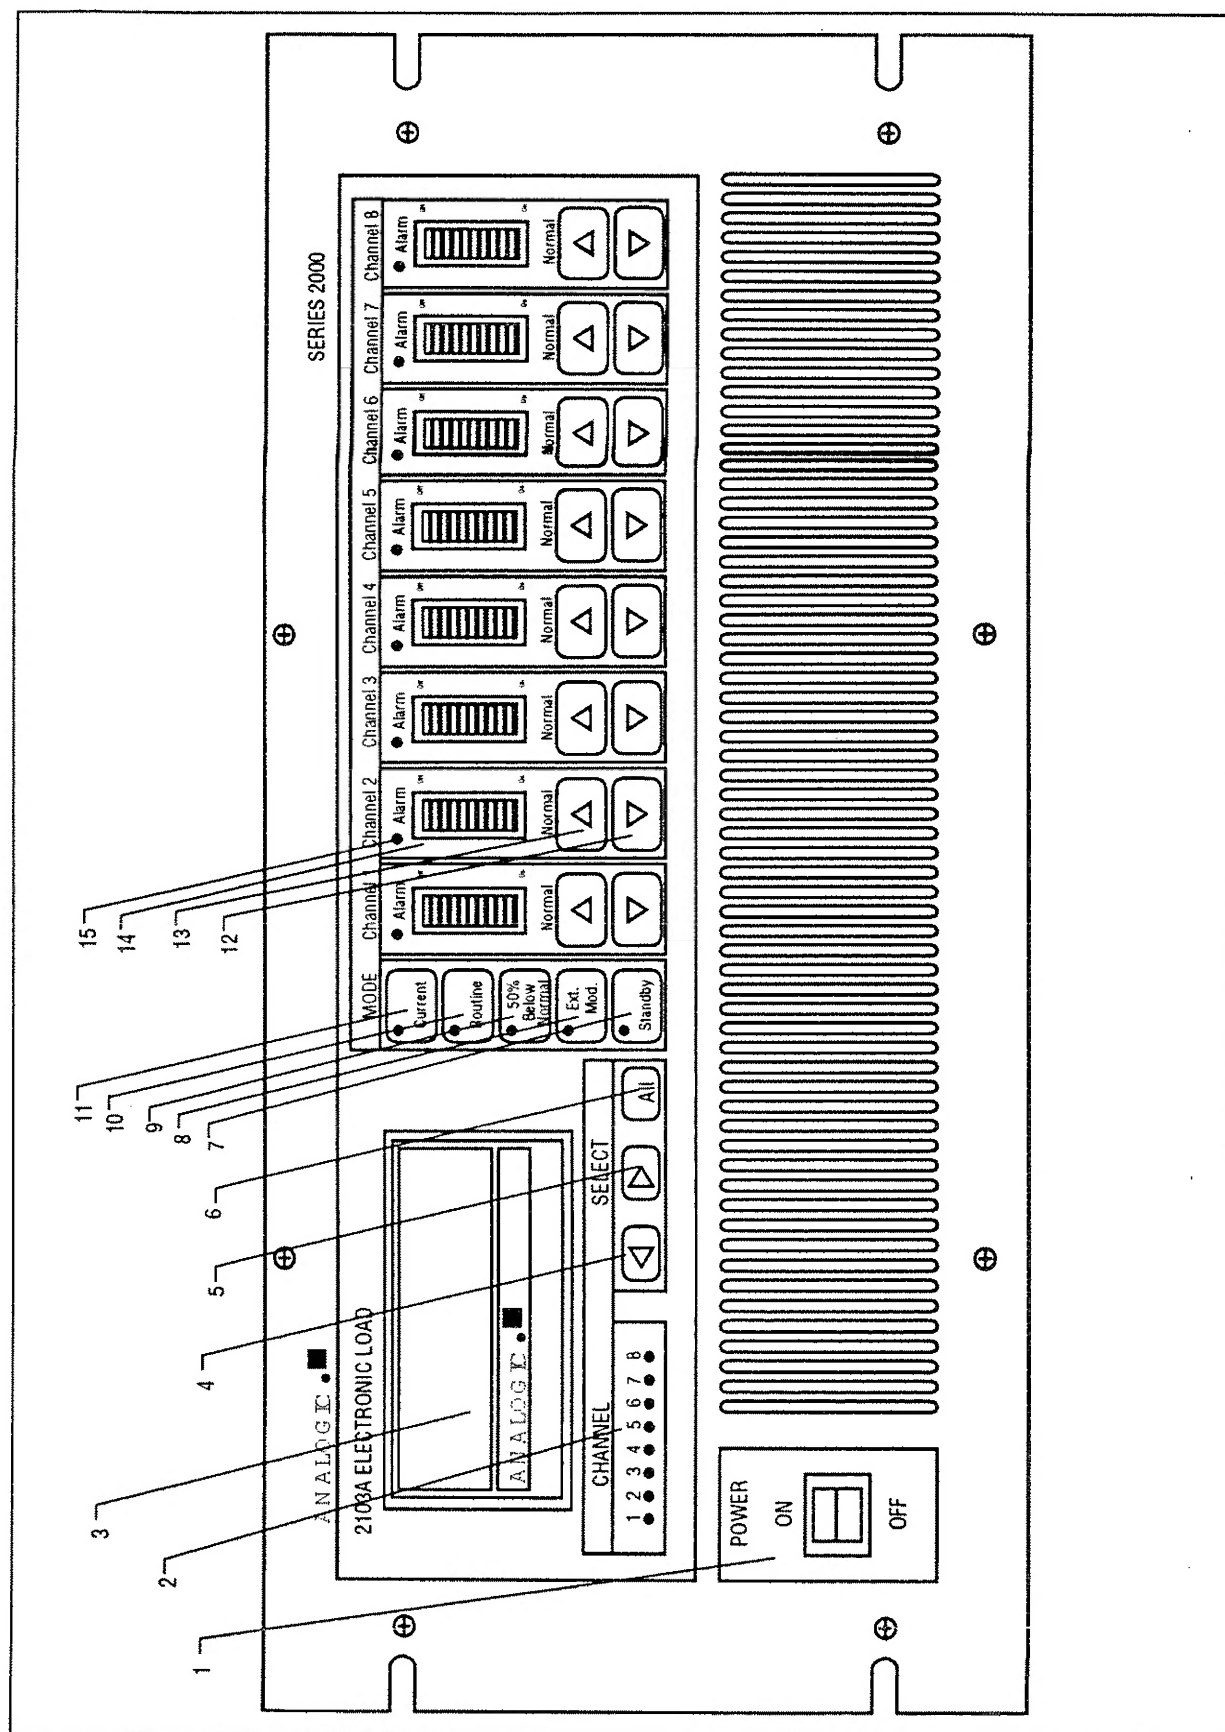


Figure 1-2. Front Panel Keyboard.

Electronic Load Key Definition Guide

The following is a list of each of the keys and their functions that appear on the front panel of the Model 2103A Electronic Load system. In parentheses please note the key number as it is referenced in Figure 1-2.

Select Keys	
Key	Function
Left arrow (4)	This key is used to select different channels. Note that by pressing this key the channel number as indicated by the LEDs changes in descending order.
Right arrow (5)	By pressing this key, the selected channel (indicated by one of the eight LEDs in the channel group) will be moved to the right.
All (6)	<p>This key has a number of different functions.</p> <p>Pressing this key followed by any key from the MODE key group results in executing the respective command for all channels as follows:</p> <p>[ALL] [CURRENT] – all the channels will go into current mode.</p> <p>[ALL] [RESISTIVE] – all the channels will go into resistive mode.</p> <p>[ALL] [50% BELOW NOMINAL] – all the channels which are in current mode will go 50% below nominal; the channels in resistive or external modulation mode will not be affected.</p> <p>[ALL] [EXT. MODULATION] – all the channels will go into external modulation mode.</p> <p>[ALL] [STAND BY] – all the channels will go into stand-by except the channels in external modulation mode.</p> <p>If the electronic load is in remote mode (GPIB mode) pressing this key will put the system into local mode.</p> <p>Pressing this key followed by the "left arrow" key will indicate the voltage for the selected channel on the 4 1/2 digit display. When the display is in voltage mode the mode LED is blinking.</p> <p>Pressing this key followed by the "right arrow" key will indicate the current for the selected channel on the 4 1/2 digit display.</p>

Mode Keys	
Key	Function
	Note: All MODE keys have a corresponding MODE LED that indicates the status of the mode. With the LED on, that mode is activated.
Stand By (7)	By pressing this key, the selected channel will go into stand-by mode. Continuously pressing this key switches the load between the nominal current setting and zero dynamically at a frequency of approximately 200 Hz.
Ext. Mod. (8)	Pressing this key enables the external modulation input.
50% Below (9)	If in CURRENT mode, pressing this key results in the value of current setting to change to 50% of its nominal value. Continuously pressing this key switches the load between the nominal current setting and 50% of this value dynamically at a frequency of approximately 200 Hz.
Resistive (10)	Pressing this key activates the RESISTIVE mode of operation.
Current (11)	Pressing this key activates the CURRENT mode of operation.

Channel Keys	
Key	Function
Down arrow (12)	Pressing this key, the value for current or resistance for the respective channel may be decremented.
Up arrow (13)	Pressing this key, the value of current or resistance for the respective channel may be incremented.

Channel LEDs (2)

There are eight LEDs numbered from 1 to 8 indicating which channel is selected. Selecting a particular channel activates the voltage or current measurement for that channel (using the 4 1/2 digit display); it also enables the user to change the mode of operation using the MODE keys.

Alarm LEDs (15)

Every channel has an alarm LED which will blink if an alarm condition occurs (over-power, over-voltage, over-current, over-temperature).

Bar Graphs LEDs (14)

There is a 10 LED bar graph indicator for every channel indicating the setting point for a respective channel.

Chapter 2

Product Specifications

The following are the specifications for the multi-channel electronic load:

Dimensions and Weight:

Height:	8.72 in.
Width:	19.00 in.
Depth:	20.60 in.
Weight:	38 lbs.

Operating Conditions for any Single Channel

Operating Voltage:	4.0V (at 50A*) to 150 VDC *derated current can be obtained at lower operating voltages. (See Figure 2-1)
--------------------	---

Maximum Operating Current: 50A

Maximum Operating Power: 250 watts (See Figure 2-2)

Current Mode

Range:	0.5 – 50.0 amps*
Resolution:	10.0 mA
Accuracy:	0.2% F.S., ± 75 mA *usable range – range minimum is 0.0 amps ± 100 mA

Resistive Mode

Resistive mode has four ranges depending on the output voltage of the unit under test.

Note: For good accuracy in Resistive Mode, the value of resistance in ohms should be smaller than the value of voltage in volts.

Range 1

UUT Output Voltage:	4.0 – 14.0V
Resistance (ohms):	0.096 – 4.8
Resolution (ohms):	0.096
Accuracy:	$\pm 1.5\%$ of setting, ± 0.096 ohms

Range 2

UUT Output Voltage:	4.0 – 50.0V
Resistance (ohms):	0.33 – 15
Resolution (ohms):	0.33
Accuracy:	±1.5% of setting, ±0.33 ohms

Range 3

UUT Output Voltage:	10.0 – 125V
Resistance (ohms):	0.75 – 30
Resolution (ohms):	0.75
Accuracy:	±5% of setting, ±0.75 ohms

Range 4

UUT Output Voltage:	10.0 – 150V
Resistance (ohms):	1 – 40
Resolution (ohms):	1
Accuracy:	±5% of setting, ±1.0 ohms

Current Measurement

Resolution:	4 1/2 digits
Accuracy:	±1% of setting, ±10 mA
Linearity:	±1 display count
Temperature drift:	80 ppm/°C
Self Calibration:	Offset and gain calibration once per second
Update rate:	50 ms

Voltage Measurement*

Resolution:	4 1/2 digits
Accuracy:	±1% of setting, ±10 mV
Linearity:	±1 display count
Temperature drift:	80 ppm/°C
Self Calibration:	Offset and gain calibration once per second
Update rate:	50 ms

* with remote sense lines connected (see Figure 1-2, rear panel)

External Modulation Interface

Description

The external modulation feature of the Model 2103A Electronic Load enables the user to input waveforms or DC control voltages to control the load current. When the external modulation is used, the load acts as a transconductance (voltage to current) amplifier. The load inputs remain floating and isolated even if more than one load section is connected to the same external input.

Specifications

Number of External Inputs:	8
Current Ranges:	0 to 50 amps
Input Voltage for Full Scale Output:	5.0 volts
Bandwidth:	-3 dB at 45 kHz

Operation

Connecting the Signal Source

The external signal source is interfaced to the Model 2103A Load on the rear panel. There are 8 BNC connectors, labeled 1 to 8, one for each channel of the load. Use a standard BNC cable to connect the load channel to the external signal source.

Programming the Model 2103A Load

To use the external modulation of a given load channel, select the channel using the left arrow key, the right arrow key, or the ALL key and press 'EXTERNAL MODULATION' in the 'MODE' field. The 'EXTERNAL MODULATION' LED will turn on indicating that the channel is in external modulation mode. The voltage input is linearly proportional to the loaded current.

Analog Meas. Out

Description

The BNC connector on the rear panel of the unit is provided so that it supplies the user with means of observing the waveforms for voltage and current in real time. The interface is a standard BNC connector.

Specification

Current:	
Range:	0 – 50.0 amps 50.0 amps = 1.875 volts $\pm 1\%$, ± 0.5 mV
Voltage:	
Range:	0 – 150 volts 150 volts = 5.18 volts $\pm 1\%$, ± 1 mV
Bandwidth:	-3 dB at 50 kHz
Probe:	A high impedance probe should be used

Operation

The current or voltage waveforms for a particular channel may be displayed using the ANALOG MEAS OUT connector on the rear panel. This may be activated by selecting the measurement function from the front panel or via the GPIB interface.

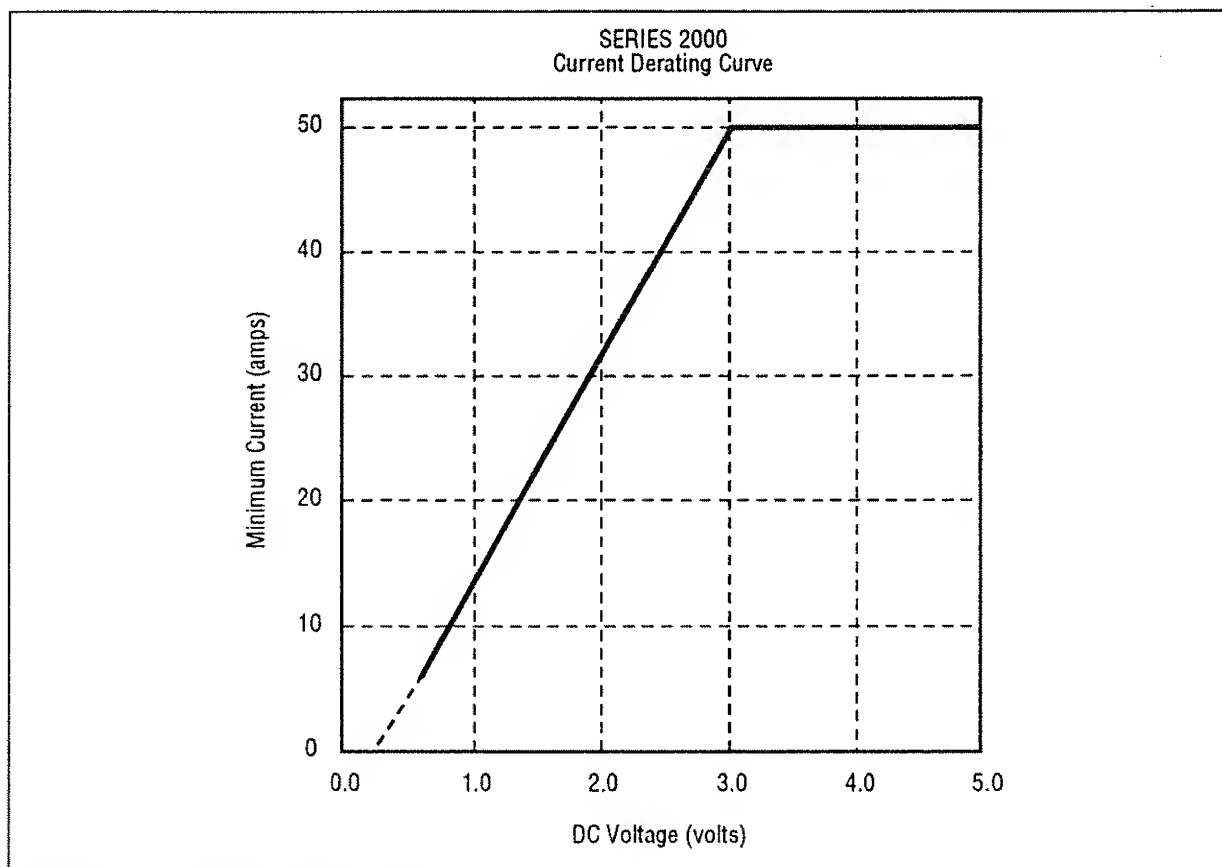


Figure 2-1. Current Derating Curve.

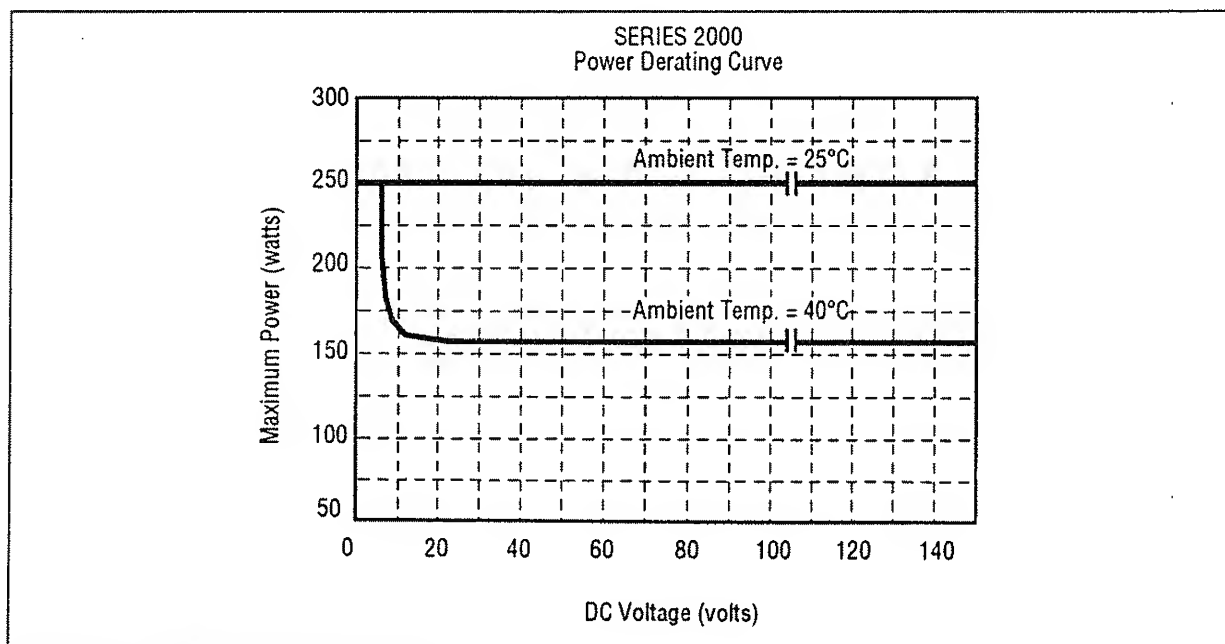


Figure 2-2. Power Derating Curve.

Chapter 3

Installation

Figure 3-1 shows the rear panel of the Model 2103A Electronic Load. The following is a detailed explanation of the different items on the rear panel and what their functions are, as related to installation:


IEEE-488 (1) (optional)

Through this connector (also referred to as GPIB) the Model 2103A Electronic Load may be controlled via a computer if this option is installed. See Chapter 4, *Remote Operation* for more detail.

IEEE-488 Address Switch Setting (2) (optional)

The Model 2103A Electronic Load system can be programmable via the IEEE-488 bus. In order to set the IEEE-488 address, a dip switch located on the rear panel is used. IEEE-488 addresses range from 1 to 30. They are set using binary format where UP or (1) is TRUE and DOWN or (0) is FALSE. The factory default setting is 20. See Figure below. In order to change the IEEE-488 address, turn off the Model 2103A Electronic Load system, set the switch settings for the new address, and then turn the power on. This will reinitialize the load to the new IEEE-488 address.

Factory Default Setting ($16 + 4 = 20$)

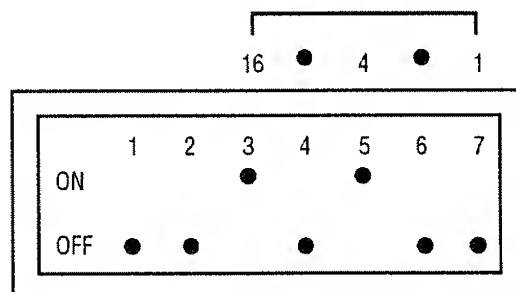

External Modulation (4)

(See the description under the "Specification" section.)

Analog Meas. Out (5)

(See the description under the "Specification" section.)

Load Interface (6) and Remote Sense (7)

The following is a list of the pin-out connectors for the load interface connector. See Figure 3-2 for physical locations. For load pins (i.e., pins A1 through H2) 10 gauge cable is recommended.

2 Pin Load Connector		17 Pin Sense Connector	
Pin	Function	Pin	Function
A1	Load #1 (+)	1	Load #1 (+) Voltage Sense
A2	Load #1 (-)	2	Load #1 (-) Voltage Sense
B1	Load #2 (+)	3	Load #2 (+) Voltage Sense
B2	Load #2 (-)	4	Load #2 (-) Voltage Sense
C1	Load #3 (+)	5	Load #3 (+) Voltage Sense
C2	Load #3 (-)	6	Load #3 (-) Voltage Sense
D1	Load #4 (+)	7	Load #4 (+) Voltage Sense
D2	Load #4 (-)	8	Load #4 (-) Voltage Sense
E1	Load #5 (+)	9	Load #5 (+) Voltage Sense
E2	Load #5 (-)	10	Load #5 (-) Voltage Sense
F1	Load #6 (+)	12	Load #6 (+) Voltage Sense
F2	Load #6 (-)	13	Load #6 (-) Voltage Sense
G1	Load #7 (+)	14	Load #7 (+) Voltage Sense
G2	Load #7 (-)	15	Load #7 (-) Voltage Sense
H1	Load #8 (+)	16	Load #8 (+) Voltage Sense
H2	Load #8 (-)	17	Load #8 (-) Voltage Sense

Note: Pin 11 is not used.

Input Power Connector (8)

At least 300 VA of power is required. The Model 2103A Electronic Load may be configured for 120 or 240 volt operation by simply switching the module referred to by (9) in Figure 3-1.

Input Voltage Select Module (9)

As specified above, this module is used to switch from 120 volt input power mode to 240 volt.

Input Power Fuse (10)

A 5.0 amp fuse is recommended.

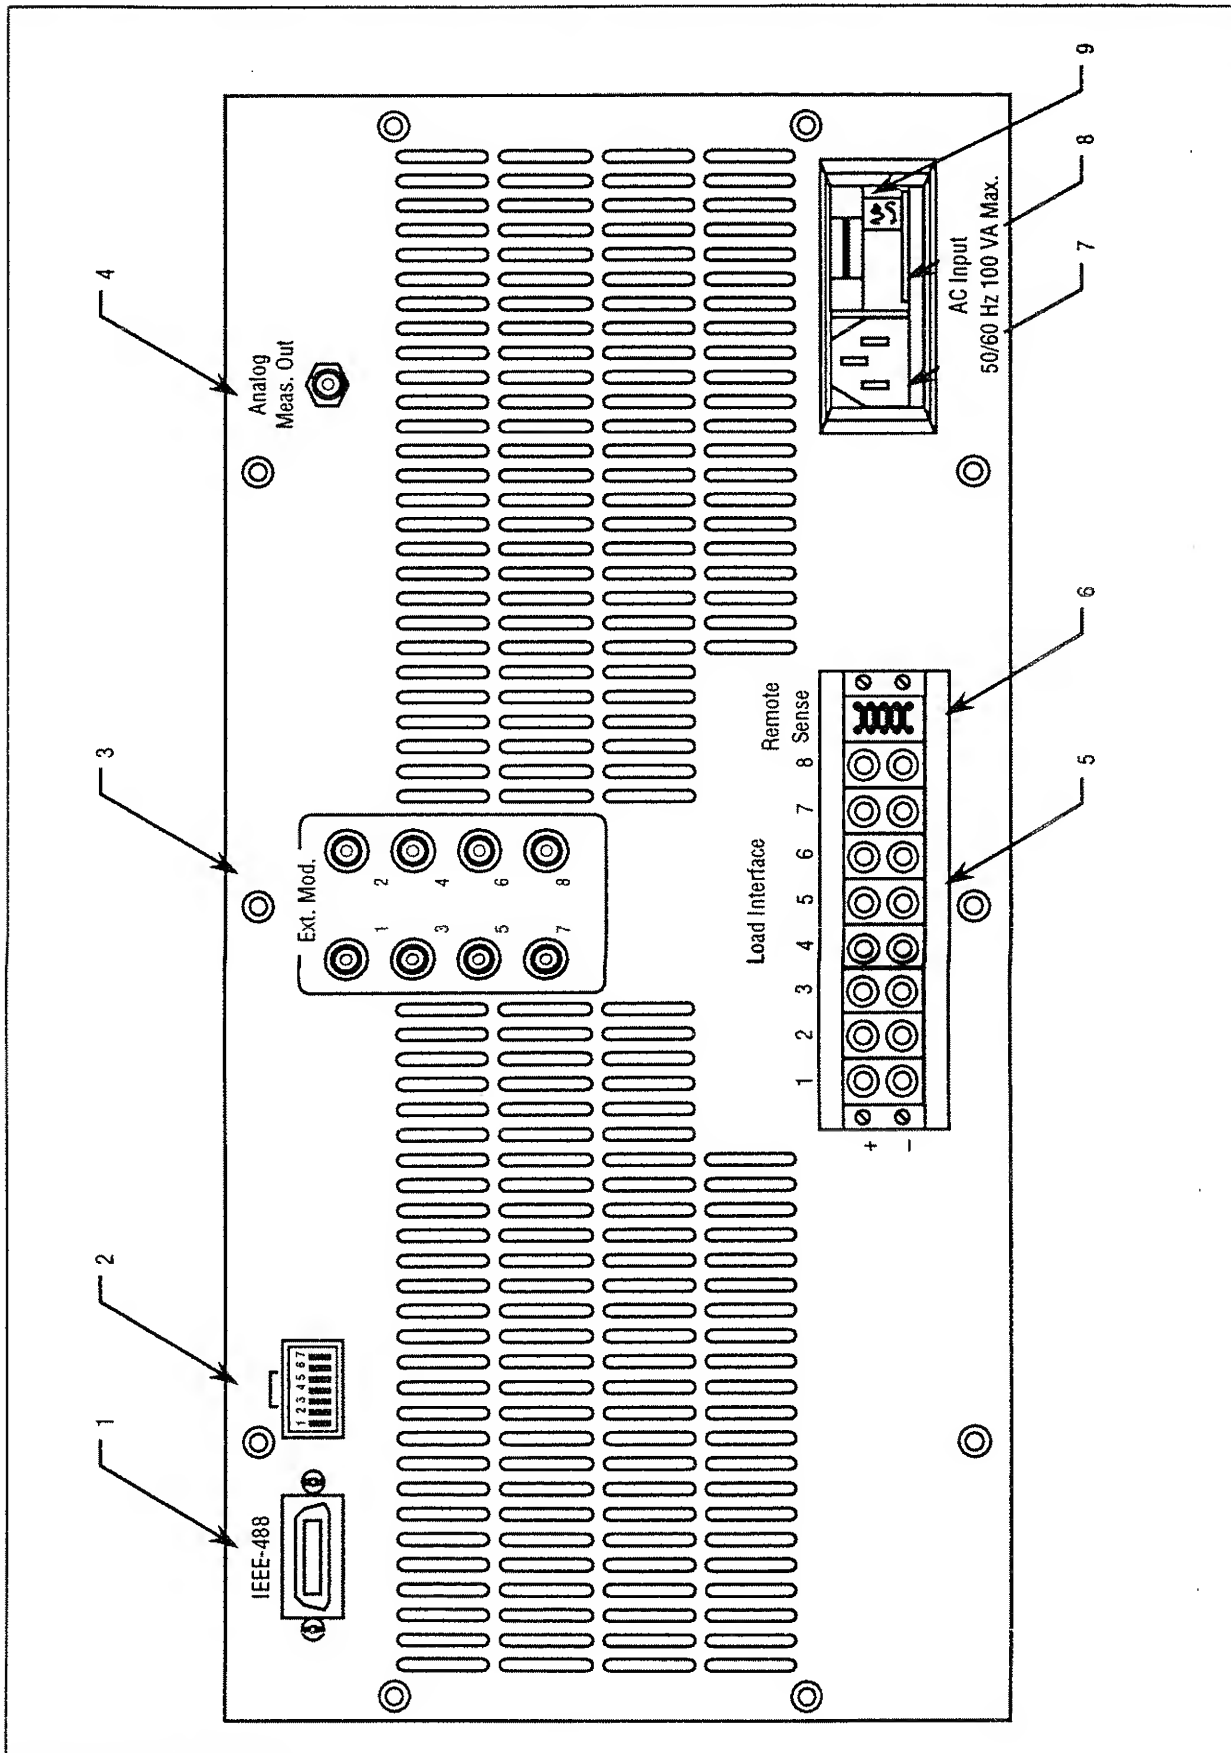


Figure 3-1. Rear Panel

Chapter 4

Operating Instructions

The Model 2103A Electronic Load accepts instructions locally, from the front panel, or remotely, over the optional IEEE-488 bus, to control and take measurements for each of the 8 load sections in the unit.

Powering the Unit On and Off

IMPORTANT: Insure that no external voltages are applied to the Model 2103A load terminals when powering the unit on or off. Turning the Model 2103A on or off with external voltages applied to the load channels can cause permanent damage to the instrument.

Local (Front Panel) vs. Remote (GPIB) Operation

Note: Square brackets [] indicate a command key on the front panel.

After power up the Electronic Load is in local mode with the front panel enabled. At power up the default mode of operation is the "Current Mode." All channels come up in the "Standby" condition. Notice the LEDs for the "Current Mode" and "Standby" are on. With the GPIB option installed, sending a command over the GPIB bus results in the unit to be operating in the REMOTE mode. All CHANNEL LEDs will be turned on indicating that the unit is in REMOTE mode. The Electronic Load can be switched back into 'LOCAL' mode by pressing the [ALL] key.

Selecting the Mode of Operation

Any load channel may operate in Constant Current or Constant Resistance mode. It may also be in the 'standby' mode in which case it will be inactive. In addition the programmed current value may be set to 50% of its nominal value by pressing the '50% below nominal' key. Operating mode for a load channel can be selected in the following manner:

Select the desired load channel using the [left arrow], or [right arrow] keys in the 'SELECT' field. The corresponding LED in the 'CHANNEL' field will be lit. The LEDs in the 'MODE' field indicate the channel status (i.e., if the channel is in 'resistive' mode, then the 'resistive' LED will be lit or if the channel is in 'current' and '50% below nominal' mode then the corresponding LEDs will be lit.) Note that the 4 1/2 digit display indicates the measured current or voltage value for the selected channel.

Change the operating mode for the channel by pressing the desired key in 'mode' field. The LEDs will indicate the new operating mode.

If it is desired to put all channels in a specific operating mode (for example all channels in 'standby' mode), the [ALL] key may be used in the following manner:

Press the [ALL] key. All 'channel' LEDs will be lit.

Press the desired mode key (for example 'CURRENT'). All channels will be in selected mode.

Setting Current or Resistance Value

The value for current or resistance may be set for every channel using the [up arrow] or [down arrow] keys.

Setting the Value of Current in CURRENT Mode:

Pressing [UP] ([DOWN]) key will increment (decrement) the current value for the respective channel with 10 mA of resolution. Setpoint for every channel is indicated by a bar-graph indicator with a resolution of 5 amps. During incrementing (decrementing) the current value, the LED for corresponding channel blinks.

Programming in Constant Resistance Mode:

To program the 2103 load in the resistance mode, the sense lines for each load channel used have to be connected to the output of the UUT (Unit Under Test) being tested. This also applies for when two or more channels are paralleled together.

To program a channel, press the down arrow key for that channel to increase the current drawn by the output of the UUT being tested and press the up arrow key to decrease the current draw by that output.

The panel display and the bar graph will always show the actual current being drawn by the output of the UUT being tested but not the resistance.

As specified in Chapter Two (Specifications), there are four operating ranges in the Resistive Mode depending on the UUT voltage. When in the Local Mode, the ranges are automatically selected as a function of UUT voltage. For example, if UUT voltage is set at 5 volts, Range 1 will be selected and the value of the resistor may be incremented/decremented with the Up/Down keys in 0.096Ω increments. This resistor value will be maintained over the specified voltage range (i.e., 4–14 volts). If the voltage were to go beyond 14 volts, the range will automatically switch to Range 2 and the resistance value will be set for the new range according to the following formula:

$$\text{New resistance} = \text{New range step} * \frac{\text{old resistance}}{\text{old range step}}$$

For example, if in Range 1 the resistance was at 0.288Ω, and the voltage was increased from 6 volts to 20 volts, the new resistor value will be:

$$0.33 * \frac{0.288}{0.096} = 0.99 \text{ ohm}$$

In the GPIB remote operation, the resistive ranges are established with the RRRANGE Command (See GPIB Commands) and are not changed as a result of voltage change. The user, therefore, should change the range if the UUT voltage is expected to fall out of range.

Current Measurement

Current measurement may be activated by pressing the [ALL] key followed by the [right arrow] key. The instrument will display the current for the selected channel.

Voltage Measurement

Voltage measurement may be activated by pressing the [ALL] key followed by the [left arrow] key. The instrument will display the voltage for the selected channel. The LEDs on the 'current' or 'resistive' mode keys (depending on which one is selected) will blink indicating that the voltage measurement (and not current measurement) is displayed.

When changing from voltage to current measurement or vice versa, allow a few seconds for the new measurement value to stabilize.

Measurements of the same type are now faster than measurements of opposite type. For example, if you need to measure voltage and current for all 8 channels, it's faster to read all the voltages first and then read all the currents, rather than alternating voltage and current. It takes longer to alternate because there is a delay involved when switching from voltage to current mode within the panel meter on the front of the 2103.

Alarm Conditions

Over-voltage, over-current, over-power, or over-temperature conditions result in the ALARM LED being on. The LED will remain on even if the alarm condition is removed; the particular alarmed channel will go into the "Standby" mode. Pressing any command key or sending an alarm command via GPIB will turn the LED off.

When an alarm occurs RNOMINAL and RRANGE now go to their default values, RNOMINAL = 50 ohms and RRANGE = 4.

External Modulation

The external modulation inputs may be activated by pressing the [EXT.MOD.] key. The corresponding LED will turn on indicating that the channel is in external modulation. The user shall provide external modulation signal (from a signal generator — see chapter 2 for electrical specifications) via corresponding BNC connector on rear panel. Note that the same signal generator may be used for more than one channel; channel-to-channel isolation is provided internally. The [STANDBY] key will not turn the external modulation mode off. The [EXTERNAL MODULATION] key has to be pressed again to turn the external modulation mode OFF. Note; the external modulation mode will not work in the Remote (GPIB) Program Mode.

Dynamic Mode — Front Panel Access

Manual operation of the front panel keyboard allows the user to dynamically switch 50% of nominal current or 100% of nominal current at a fixed frequency of 200 Hz (factory selectable from 10 to 200 Hz by continually pressing the "50% below nominal" or "Standby" keys). Slew rate is 5.0 amps/ μ s typical.

Dynamic Mode — GPIB Interface

Each channel can be programmed with two current values from .5 to 50 amps. The channel can be programmed with a switching frequency ranging between 10 Hz to 200 Hz. Slew rate is 5.0 amps/ μ s typical.

Remote (GPIB) Operation

Remote operation of the Model 2103A Electronic Load system requires a computer keyboard to input instructions or commands to the IEEE-488 bus. The bus will then transfer this information to be carried out by the electronic load unit.

By sending any of the following GPIB commands, the Electronic Load will automatically go into the REMOTE mode. All CHANNEL LEDs will be turned on indicating that the unit is in REMOTE mode.

The GPIB address setting switch is located on the rear panel (see *Installation*, Chapter Three).

The following are the IEEE commands for the Model 2103A Electronic Load unit:

Parameter Commands											
Command	Function										
RRANGE n	This command changes the resistive range of the selected load or group and is dependent on the voltage at the output of the power supply. N is a range number between 1 and 4.										
	<table> <tr> <th>Range</th><th>Volts</th></tr> <tr> <td>1</td><td>4 – 14V</td></tr> <tr> <td>2</td><td>4 – 50V</td></tr> <tr> <td>3</td><td>10 – 125V</td></tr> <tr> <td>4</td><td>10 – 150V</td></tr> </table>	Range	Volts	1	4 – 14V	2	4 – 50V	3	10 – 125V	4	10 – 150V
Range	Volts										
1	4 – 14V										
2	4 – 50V										
3	10 – 125V										
4	10 – 150V										
IOFFSET n	Multiply the nominal current of the selected load(s) by n% (where $0 \leq n \leq 99$).										
RNOMINAL n	Set the nominal resistance to n ohms. Data format: x.xxxxE+xx										
INOMINAL n	Set the nominal current to n amps. Data format: x.xxxxE+xx										
HIGH	This command enables the static high level mode of the selected load or group.										
LOW	This command enables the static low level mode of the selected load or group.										
Measurement Commands											
Command	Functions										
MV nnn	Measure voltage of nnn load(s). nnn = single load, e.x. 1 multiple loads separated by commas, e.x. 1,3,7 range of loads with endpoints separated by .., e.x. 3 .. 7 combinations of the above Data is returned in the format: x.xxxxE+xx,x.xxxxE+xx, etc.										
MI nnn	Measure the current of nnn load(s) nnn = single load, e.x. 1 multiple loads separated by commas, e.x. 1,3,7 range of loads with endpoints separated by .., e.x. 3 .. 7 combinations of the above Data is returned in the format: x.xxxxE+xx,x.xxxxE+xx, etc.\										
FASTV nnn	Provides a very quick rough approximation to the actual voltage. The measurement uses an 8-bit A/D converter, and its accuracy is not specified. nnn is the same as for "MV" and "MI."										
Note: 1. If the "MV", "MI" or "FASTV" command is entered without a load list, the measurements are performed on the currently selected loads.											

Mode Commands

Command	Function
IMODE	Set selected load(s) to current mode
RMODE	Set selected load(s) to resistive mode
LOAD nnn	This command selects an individual load or group for programming or measuring. NNN is the load or group. Note: For a range of loads enter two dots (.) between two numbers to indicate a continuous group and/or a comma (,) to separate two arbitrary loads or continuous group. Example: LOAD 3 . . 7 (continuous group) LOAD 1,3,7 (arbitrary group) LOAD 1,3 . . 5,7 (combination group)
DYNAMIC	Set selected load(s) to dynamic current mode, oscillating between INOMINAL and IOFFSET amps at FREQ Hz.
COPY n,nnn	This command copies the parameters of one load to another. N is the source load and NNN is the destination load.
LOCAL	This command switches from remote mode to local mode.
STATIC	Set selected load(s) to static current mode at INOMINAL amps.
FREQ n	Set oscillation frequency to n Hz for load(s) in dynamic current mode (where $10 \leq n \leq 200$).

Status Commands

Command	Function
EXEC	Run the selected load(s) with programmed params. All other commands require an EXEC to take effect.
CLEAR nnn	Sets the selected channels to their default (power-on) settings.
CLEARALL	Sets all channels to their default (power-on) settings.
STOP	Set the selected load(s) to standby mode.
STOPALL	Set all load(s) to standby mode.

Miscellaneous Commands	
Command	Function
STATUS n	Send parameters from selected load(s) to controller. Format of return string: <LOAD=x: INOMINAL=x, IOFFSET=x, RRANGE=x, RNOMINAL=x, IMODE/RMODE,RUN/STOP/EXTMOD/ALARM;>
ALARM	This command lists the alarmed loads. Format for return list of loads which have alarms: ALARM = x,x,x,... where x is the actual load. Format for return list of loads which have no alarms: ALARM = none
VERSION	Send version number to controller Format of return string: ML Vx.xx mm-dd-yy Note: Due to the fact that the GPIB commands are executed with different speed (e.g., the "EXEC" command is executed very fast, and the current or voltage measurement commands are slow), it is recommended that the user checks the serial poll byte for the "BUSY" bit and the "DATA AVAILABLE" bit. The contents of the serial poll byte is the following: bit 0 – not used bit 1 – busy (command in progress) bit 2 – rda (requested data available) bit 3 – run/stop (0 – stop, 1 – run) bit 4 – device alarm (alarm condition present) bit 5 – measurement error * bit 6 – service request bit 7 – command error (error in command string) * Serial poll bit 5 is set to 1 if there is an error in serial communications between the 2103 and the panel meter. This bit should be checked after sending either the "MV" or "MI" commands.

Chapter 5

Calibration

Scope


The Model 2103A Electronic Load was designed to minimize the calibration effort. The following consists of a brief procedure that should be performed on the controller board (PN 10-14206). The unit should be calibrated once every six months.

Equipment

1. Digital Multimeter (HP 3478A or equivalent)
2. DC Power Supply (HP 6032A or equivalent)
3. Current Shunt 100 mV = 50 amps, +0.05% accuracy

Procedure

1. Turn on the Model 2103A Electronic Load.
2. Connect the power supply (HP 6032A) to channel 1 of the ELECTRONIC LOAD (pins A1 and A2 of the power connector on the rear panel) through the shunt and the DMM as shown in the diagram below:

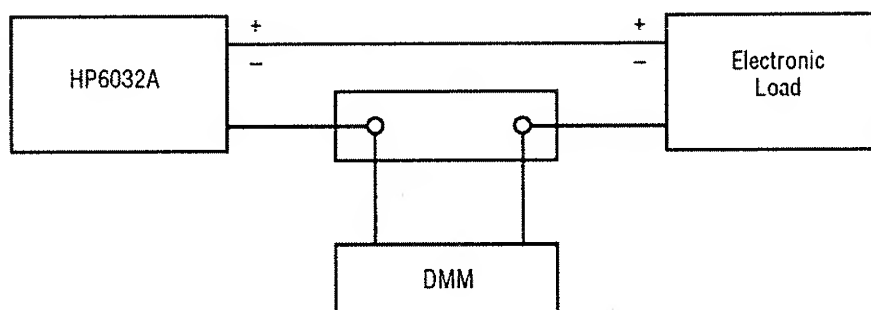

3. Set the voltage on the HP 6032A to 5 volts.
4. Set the current limit on the HP 6032A to 5 amps.
5. On the DMM press [DCV].
6. Program channel 1 in current mode to the maximum value of 50 amps by pressing [up arrow] key until maximum value is reached (i.e., the current measured with the external digital multimeter doesn't increase anymore).
7. Adjust the resistor pot R14 for a reading of 100 ± 0.1 mV on the HP 3478 voltmeter.
8. Program channel 1 to the minimum value 0 amps by pressing the [DOWN] key until minimum value is reached (i.e., the current measured with the external digital multimeter doesn't decrease anymore).
9. Adjust the resistor pot R134 for a reading of 0.000 ± 0.1 mV on the HP 3478 voltmeter.



10. Connect the output of the power supply to channels 2 through 8 and repeat steps 6 through 9 by adjusting the following resistor pots for full-scale calibration:

	CHANNEL 2 — R16
CHANNEL 3 — R46	CHANNEL 4 — R48
CHANNEL 5 — R78	CHANNEL 6 — R80
CHANNEL 7 — R110	CHANNEL 8 — R112

and the following for zero calibration:

	CHANNEL 2 — R140
CHANNEL 3 — R146	CHANNEL 4 — R152
CHANNEL 5 — R158	CHANNEL 6 — R164
CHANNEL 7 — R170	CHANNEL 8 — R176

  Appendix A **Unit Schematics**

[illegible]

CAUTION
THIS ASSEMBLY CONTAINS
ELECTROSTATIC
SENSITIVE
DEVICES



HANDLE PER A2-1058

ANALOGIC ■ PERBODY, JR. 01222


SCHEMATIC
DUAL FAN CONTROL

CODE IDENT NO. 18M00	SIZE D	5-14185	REV 1
SCALE: NONE	FILE NAME: 5+1851.SCH SHEET 1 OF 1		

THIS DOCUMENT IS THE PROPERTY OF ANALOGIC CORPORATION. IT IS TO BE USED FOR THE PURPOSES SPECIFIED IN THE ORDER. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF ANALOGIC CORPORATION.

REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS

D 5-14186 01

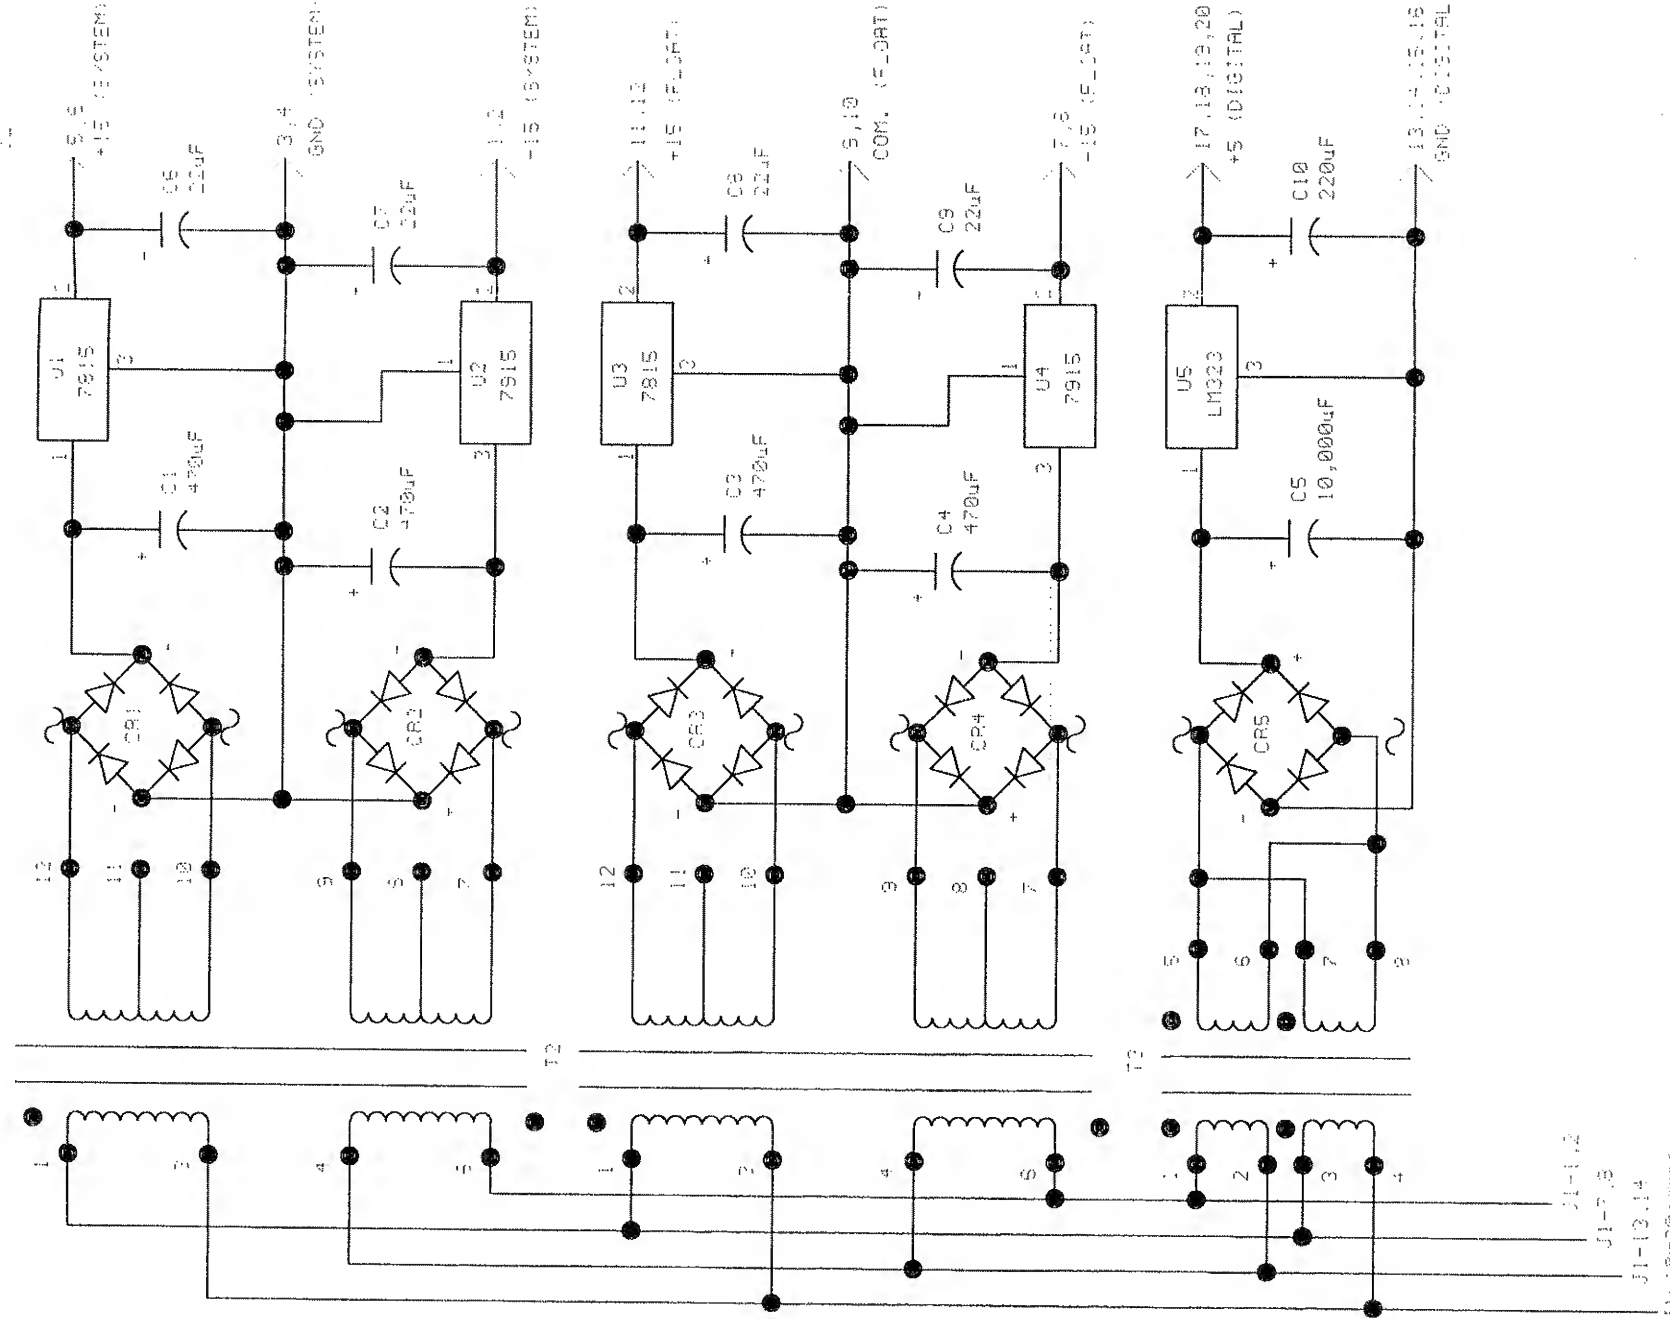

REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS

REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS


REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS

REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS

REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS


REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS

REVISIONS			
REV.	DATE	BY	APP.
1	10/1/86	W. J. HARRIS	W. J. HARRIS
2	10/1/86	W. J. HARRIS	W. J. HARRIS
3	10/1/86	W. J. HARRIS	W. J. HARRIS
4	10/1/86	W. J. HARRIS	W. J. HARRIS
5	10/1/86	W. J. HARRIS	W. J. HARRIS
6	10/1/86	W. J. HARRIS	W. J. HARRIS
7	10/1/86	W. J. HARRIS	W. J. HARRIS
8	10/1/86	W. J. HARRIS	W. J. HARRIS
9	10/1/86	W. J. HARRIS	W. J. HARRIS
10	10/1/86	W. J. HARRIS	W. J. HARRIS

 


NOTES : 351M3310 5537M17 : 5310141312316 5512316

1. ALL DIODES ARE 1N4004.
2. COMPONENTS INSIDE CAGED LINES ARE NOT ON THIS PC BOARD.
3. ALL RESISTORS ARE 1/4 WATT.
4. 15 AMP VOLTS AND RESISTORS PROVIDER INFORMATION FROM THE CENTER OF THE DISCUSSIONS THIS SECTION.
5. 400 VOLT ISOLATION IS REQUIRED BETWEEN SECTION 1 AND SECTION 2.
6. ON UNIT USE 300 VOLT TEST POINTS FOR SIZE SET THIS APPROPRIATELY FOR DIFFERENT BOMBS TESTING.
7. 100 AND 200 ARE NOT INSTALLED ON THIS UNIT.
8. REPLACED BY A 20 AMP JUMPER LINE.

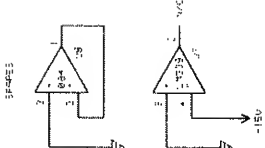

ANALOGIC		FEBRUARY, 1985 01549	
SCHEMATIC		POWER LOAD CASE	
SECTION A1		SECTION A1	
DATE	TIME	DATE	TIME
02/27/85	14:00	02/27/85	14:00
DESIGNED BY	CHECKED BY	DESIGNED BY	CHECKED BY
W. J. B. / J. B. B.	W. J. B. / J. B. B.	W. J. B. / J. B. B.	W. J. B. / J. B. B.
PROJECT NAME	PROJECT NAME	PROJECT NAME	PROJECT NAME
POWER LOAD CASE	POWER LOAD CASE	POWER LOAD CASE	POWER LOAD CASE
APPLICATOR	APPLICATOR	APPLICATOR	APPLICATOR
W. J. B. / J. B. B.	W. J. B. / J. B. B.	W. J. B. / J. B. B.	W. J. B. / J. B. B.

 



Schematic
Power Load Cube
(Section B)

18M00	E	901146	01
-------	---	--------	----


THIS DRAWING IS THE PROPERTY OF ANALOGIC CORPORATION. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF ANALOGIC CORPORATION.


REV	DATE	DESCRIPTION
1	5-14-90	INITIAL RELEASE
2	7-21-97	REVISION 1
3	7-21-97	REVISION 2
4	7-21-97	REVISION 3
5	7-21-97	REVISION 4
6	7-21-97	REVISION 5
7	7-21-97	REVISION 6
8	7-21-97	REVISION 7
9	7-21-97	REVISION 8
10	7-21-97	REVISION 9
11	7-21-97	REVISION 10
12	7-21-97	REVISION 11
13	7-21-97	REVISION 12
14	7-21-97	REVISION 13
15	7-21-97	REVISION 14
16	7-21-97	REVISION 15
17	7-21-97	REVISION 16
18	7-21-97	REVISION 17
19	7-21-97	REVISION 18
20	7-21-97	REVISION 19
21	7-21-97	REVISION 20
22	7-21-97	REVISION 21
23	7-21-97	REVISION 22
24	7-21-97	REVISION 23
25	7-21-97	REVISION 24
26	7-21-97	REVISION 25
27	7-21-97	REVISION 26
28	7-21-97	REVISION 27
29	7-21-97	REVISION 28
30	7-21-97	REVISION 29
31	7-21-97	REVISION 30
32	7-21-97	REVISION 31
33	7-21-97	REVISION 32
34	7-21-97	REVISION 33
35	7-21-97	REVISION 34
36	7-21-97	REVISION 35
37	7-21-97	REVISION 36
38	7-21-97	REVISION 37
39	7-21-97	REVISION 38
40	7-21-97	REVISION 39
41	7-21-97	REVISION 40
42	7-21-97	REVISION 41
43	7-21-97	REVISION 42
44	7-21-97	REVISION 43
45	7-21-97	REVISION 44
46	7-21-97	REVISION 45
47	7-21-97	REVISION 46
48	7-21-97	REVISION 47
49	7-21-97	REVISION 48
50	7-21-97	REVISION 49
51	7-21-97	REVISION 50
52	7-21-97	REVISION 51
53	7-21-97	REVISION 52
54	7-21-97	REVISION 53
55	7-21-97	REVISION 54
56	7-21-97	REVISION 55
57	7-21-97	REVISION 56
58	7-21-97	REVISION 57
59	7-21-97	REVISION 58
60	7-21-97	REVISION 59
61	7-21-97	REVISION 60
62	7-21-97	REVISION 61
63	7-21-97	REVISION 62
64	7-21-97	REVISION 63
65	7-21-97	REVISION 64
66	7-21-97	REVISION 65
67	7-21-97	REVISION 66
68	7-21-97	REVISION 67
69	7-21-97	REVISION 68
70	7-21-97	REVISION 69
71	7-21-97	REVISION 70
72	7-21-97	REVISION 71
73	7-21-97	REVISION 72
74	7-21-97	REVISION 73
75	7-21-97	REVISION 74
76	7-21-97	REVISION 75
77	7-21-97	REVISION 76
78	7-21-97	REVISION 77
79	7-21-97	REVISION 78
80	7-21-97	REVISION 79
81	7-21-97	REVISION 80
82	7-21-97	REVISION 81
83	7-21-97	REVISION 82
84	7-21-97	REVISION 83
85	7-21-97	REVISION 84
86	7-21-97	REVISION 85
87	7-21-97	REVISION 86
88	7-21-97	REVISION 87
89	7-21-97	REVISION 88
90	7-21-97	REVISION 89
91	7-21-97	REVISION 90
92	7-21-97	REVISION 91
93	7-21-97	REVISION 92
94	7-21-97	REVISION 93
95	7-21-97	REVISION 94
96	7-21-97	REVISION 95
97	7-21-97	REVISION 96
98	7-21-97	REVISION 97
99	7-21-97	REVISION 98
100	7-21-97	REVISION 99
101	7-21-97	REVISION 100
102	7-21-97	REVISION 101
103	7-21-97	REVISION 102
104	7-21-97	REVISION 103
105	7-21-97	REVISION 104
106	7-21-97	REVISION 105
107	7-21-97	REVISION 106
108	7-21-97	REVISION 107
109	7-21-97	REVISION 108
110	7-21-97	REVISION 109
111	7-21-97	REVISION 110
112	7-21-97	REVISION 111
113	7-21-97	REVISION 112
114	7-21-97	REVISION 113
115	7-21-97	REVISION 114
116	7-21-97	REVISION 115
117	7-21-97	REVISION 116
118	7-21-97	REVISION 117
119	7-21-97	REVISION 118
120	7-21-97	REVISION 119
121	7-21-97	REVISION 120
122	7-21-97	REVISION 121
123	7-21-97	REVISION 122
124	7-21-97	REVISION 123
125	7-21-97	REVISION 124
126	7-21-97	REVISION 125
127	7-21-97	REVISION 126
128	7-21-97	REVISION 127
129	7-21-97	REVISION 128
130	7-21-97	REVISION 129
131	7-21-97	REVISION 130
132	7-21-97	REVISION 131
133	7-21-97	REVISION 132
134	7-21-97	REVISION 133
135	7-21-97	REVISION 134
136	7-21-97	REVISION 135
137	7-21-97	REVISION 136
138	7-21-97	REVISION 137
139	7-21-97	REVISION 138
140	7-21-97	REVISION 139
141	7-21-97	REVISION 140
142	7-21-97	REVISION 141
143	7-21-97	REVISION 142
144	7-21-97	REVISION 143
145	7-21-97	REVISION 144
146	7-21-97	REVISION 145
147	7-21-97	REVISION 146
148	7-21-97	REVISION 147
149	7-21-97	REVISION 148
150	7-21-97	REVISION 149
151	7-21-97	REVISION 150
152	7-21-97	REVISION 151
153	7-21-97	REVISION 152
154	7-21-97	REVISION 153
155	7-21-97	REVISION 154
156	7-21-97	REVISION 155
157	7-21-97	REVISION 156
158	7-21-97	REVISION 157
159	7-21-97	REVISION 158
160	7-21-97	REVISION 159
161	7-21-97	REVISION 160
162	7-21-97	REVISION 161
163	7-21-97	REVISION 162
164	7-21-97	REVISION 163
165	7-21-97	REVISION 164
166	7-21-97	REVISION 165
167	7-21-97	REVISION 166
168	7-21-97	REVISION 167
169	7-21-97	REVISION 168
170	7-21-97	REVISION 169
171	7-21-97	REVISION 170
172	7-21-97	REVISION 171
173	7-21-97	REVISION 172
174	7-21-97	REVISION 173
175	7-21-97	REVISION 174
176	7-21-97	REVISION 175
177	7-21-97	REVISION 176
178	7-21-97	REVISION 177
179	7-21-97	REVISION 178
180	7-21-97	REVISION 179
181	7-21-97	REVISION 180
182	7-21-97	REVISION 181
183	7-21-97	REVISION 182
184	7-21-97	REVISION 183
185	7-21-97	REVISION 184
186	7-21-97	REVISION 185
187	7-21-97	REVISION 186
188	7-21-97	REVISION 187
189	7-21-97	REVISION 188
190	7-21-97	REVISION 189
191	7-21-97	REVISION 190
192	7-21-97	REVISION 191
193	7-21-97	REVISION 192
194	7-21-97	REVISION 193
195	7-21-97	REVISION 194
196	7-21-97	REVISION 195
197	7-21-97	REVISION 196
198	7-21-97	REVISION 197
199	7-21-97	REVISION 198
200	7-21-97	REVISION 199
201	7-21-97	REVISION 200
202	7-21-97	REVISION 201
203	7-21-97	REVISION 202
204	7-21-97	REVISION 203
205	7-21-97	REVISION 204
206	7-21-97	REVISION 205
207	7-21-97	REVISION 206
208	7-21-97	REVISION 207
209	7-21-97	REVISION 208
210	7-21-97	REVISION 209
211	7-21-97	REVISION 210
212	7-21-97	REVISION 211
213	7-21-97	REVISION 212
214	7-21-97	REVISION 213
215	7-21-97	REVISION 214
216	7-21-97	REVISION 215
217	7-21-97	REVISION 216
218	7-21-97	REVISION 217
219	7-21-97	REVISION 218
220	7-21-97	REVISION 219
221	7-21-97	REVISION 220
222	7-21-97	REVISION 221
223	7-21-97	REVISION 222
224	7-21-97	REVISION 223
225	7-21-97	REVISION 224
226	7-21-97	REVISION 225
227	7-21-97	REVISION 226
228	7-21-97	REVISION 227
229	7-21-97	REVISION 228
230	7-21-97	REVISION 229
231	7-21-97	REVISION 230
232	7-21-97	REVISION 231
233	7-21-97	REVISION 232
234	7-21-97	REVISION 233
235	7-21-97	REVISION 234
236	7-21-97	REVISION 235
237	7-21-97	REVISION 236
238	7-21-97	REVISION 237
239	7-21-97	REVISION 238
240	7-21-97	REVISION 239
241	7-21-97	REVISION 240
242	7-21-97	REVISION 241
243	7-21-97	REVISION 242
244	7-21-97	REVISION 243
245	7-21-97	REVISION 244
246	7-21-97	REVISION 245
247	7-21-97	REVISION 246
248	7-21-97	REVISION 247
249	7-21-97	REVISION 248
250	7-21-97	REVISION 249
251	7-21-97	REVISION 250
252	7-21-97	REVISION 251
253	7-21-97	REVISION 252
254	7-21-97	REVISION 253
255	7-21-97	REVISION 254
256	7-21-97	REVISION 255
257	7-21-97	REVISION 256
258	7-21-97	REVISION 257
259	7-21-97	REVISION 258
260	7-21-97	REVISION 259
261	7-21-97	REVISION 260
262	7-21-97	REVISION 261
263	7-21-97	REVISION 262
264	7-21-97	REVISION 263
265	7-21-97	REVISION 264
266	7-21-97	REVISION 265
267	7-21-97	REVISION 266
268	7-21-97	REVISION 267
269	7-21-97	REVISION 268
270	7-21-97	REVISION 269
271	7-21-97	REVISION 270
272	7-21-97	REVISION 271
273	7-21-97	REVISION 272
274	7-21-97	REVISION 273
275	7-21-97	REVISION 274
276	7-21-97	REVISION 275
277	7-21-97	REVISION 276
278	7-21-97	REVISION 277
279	7-21-97	REVISION 278
280	7-21-97	REVISION 279
281	7-21-97	REVISION 280
282	7-21-97	REVISION 281
283	7-21-97	REVISION 282
284	7-21-97	REVISION 283
285	7-21-97	REVISION 284
286	7-21-97	REVISION 285
287	7-21-97	REVISION 286
288	7-21-97	REVISION 287
289	7-21-97	REVISION 288
290	7-21-97	REVISION 289
291	7-21-97	REVISION 290
292	7-21-97	REVISION 291
293	7-21-97	REVISION 292
294	7-21-97	REVISION 293
295	7-21-97	REVISION 294
296	7-21-97	REVISION 295
297	7-21-97	REVISION 296
298	7-21-97	REVISION 297
299	7-21-97	REVISION 298
300	7-21-97	REVISION 299
301	7-21-97	REVISION 300
302	7-21-97	REVISION 301
303	7-21-97	REVISION 302
304	7-21-97	REVISION 303
305	7-21-97	REVISION 304
306	7-21-97	REVISION 305
307	7-21-97	REVISION 306
308	7-21-97	REVISION 307
309	7-21-97	REVISION 308
310	7-21-97	REVISION 309
311	7-21-97	REVISION 310
312	7-21-97	REVISION 311
313	7-21-97	REVISION 312
314	7-21-97	REVISION 313
315	7-21-97	REVISION 314
316	7-21-97	REVISION 315
317	7-21-97	REVISION 316
318	7-21-97	REVISION 317
319	7-21-97	REVISION 318
320	7-21-97	REVISION 319
321	7-21-97	REVISION 320
322	7-21-97	REVISION 321
323	7-21-97	REVISION 322
324	7-21-97	REVISION 323
325	7-21-97	REVISION 324
326	7-21-97	REVISION 325
327	7-21-97	REVISION 326
328	7-21-97	REVISION 327
329	7-21-97	REVISION 328
330	7-21-97	REVISION 329
331	7-21-97	REVISION 330
332	7-21-97	REVISION 331
333	7-21-97	REVISION 332
334	7-21-97	REVISION 333
335	7-21-97	REVISION 334
336	7-21-97	REVISION 335
337	7-21-97	REVISION 336
338	7-21-97	REVISION 337
339	7-21-97	REVISION 338
340	7-21-97	REVISION 339
341	7-21-97	REVISION 340
342	7-21-97	REVISION 341
343	7-21-97	REVISION 342
344	7-21-97	REVISION 343
345	7-21-97	REVISION 344
346	7-21-97	REVISION 345
347	7-21-97	REVISION 346
348	7-21-97	REVISION 347
349	7-21-97	REVISION 348
350	7-21-97	REVISION 349
351	7-21-97	REVISION 350
352	7-21-97	REVISION 351
353	7-21-97	REVISION 352
354	7-21-97	REVISION 353
355	7-21-97	REVISION 354
356	7-21-97	

THIS DOCUMENT CONTAINS INFORMATION THAT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. IT IS THE PROPERTY OF THE U.S. GOVERNMENT AND IS LOANED TO YOUR AGENCY. IT AND ITS CONTENTS ARE NOT TO BE DISTRIBUTED OUTSIDE YOUR AGENCY. IF YOU ARE NOT AN AGENT OF THE U.S. GOVERNMENT, RETURN IT TO THE U.S. GOVERNMENT. IF YOU ARE AN AGENT OF THE U.S. GOVERNMENT, RETURN IT TO THE U.S. GOVERNMENT. IF YOU ARE AN AGENT OF THE U.S. GOVERNMENT, RETURN IT TO THE U.S. GOVERNMENT.

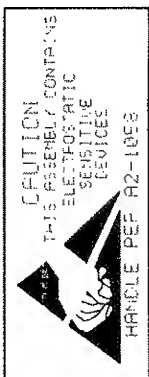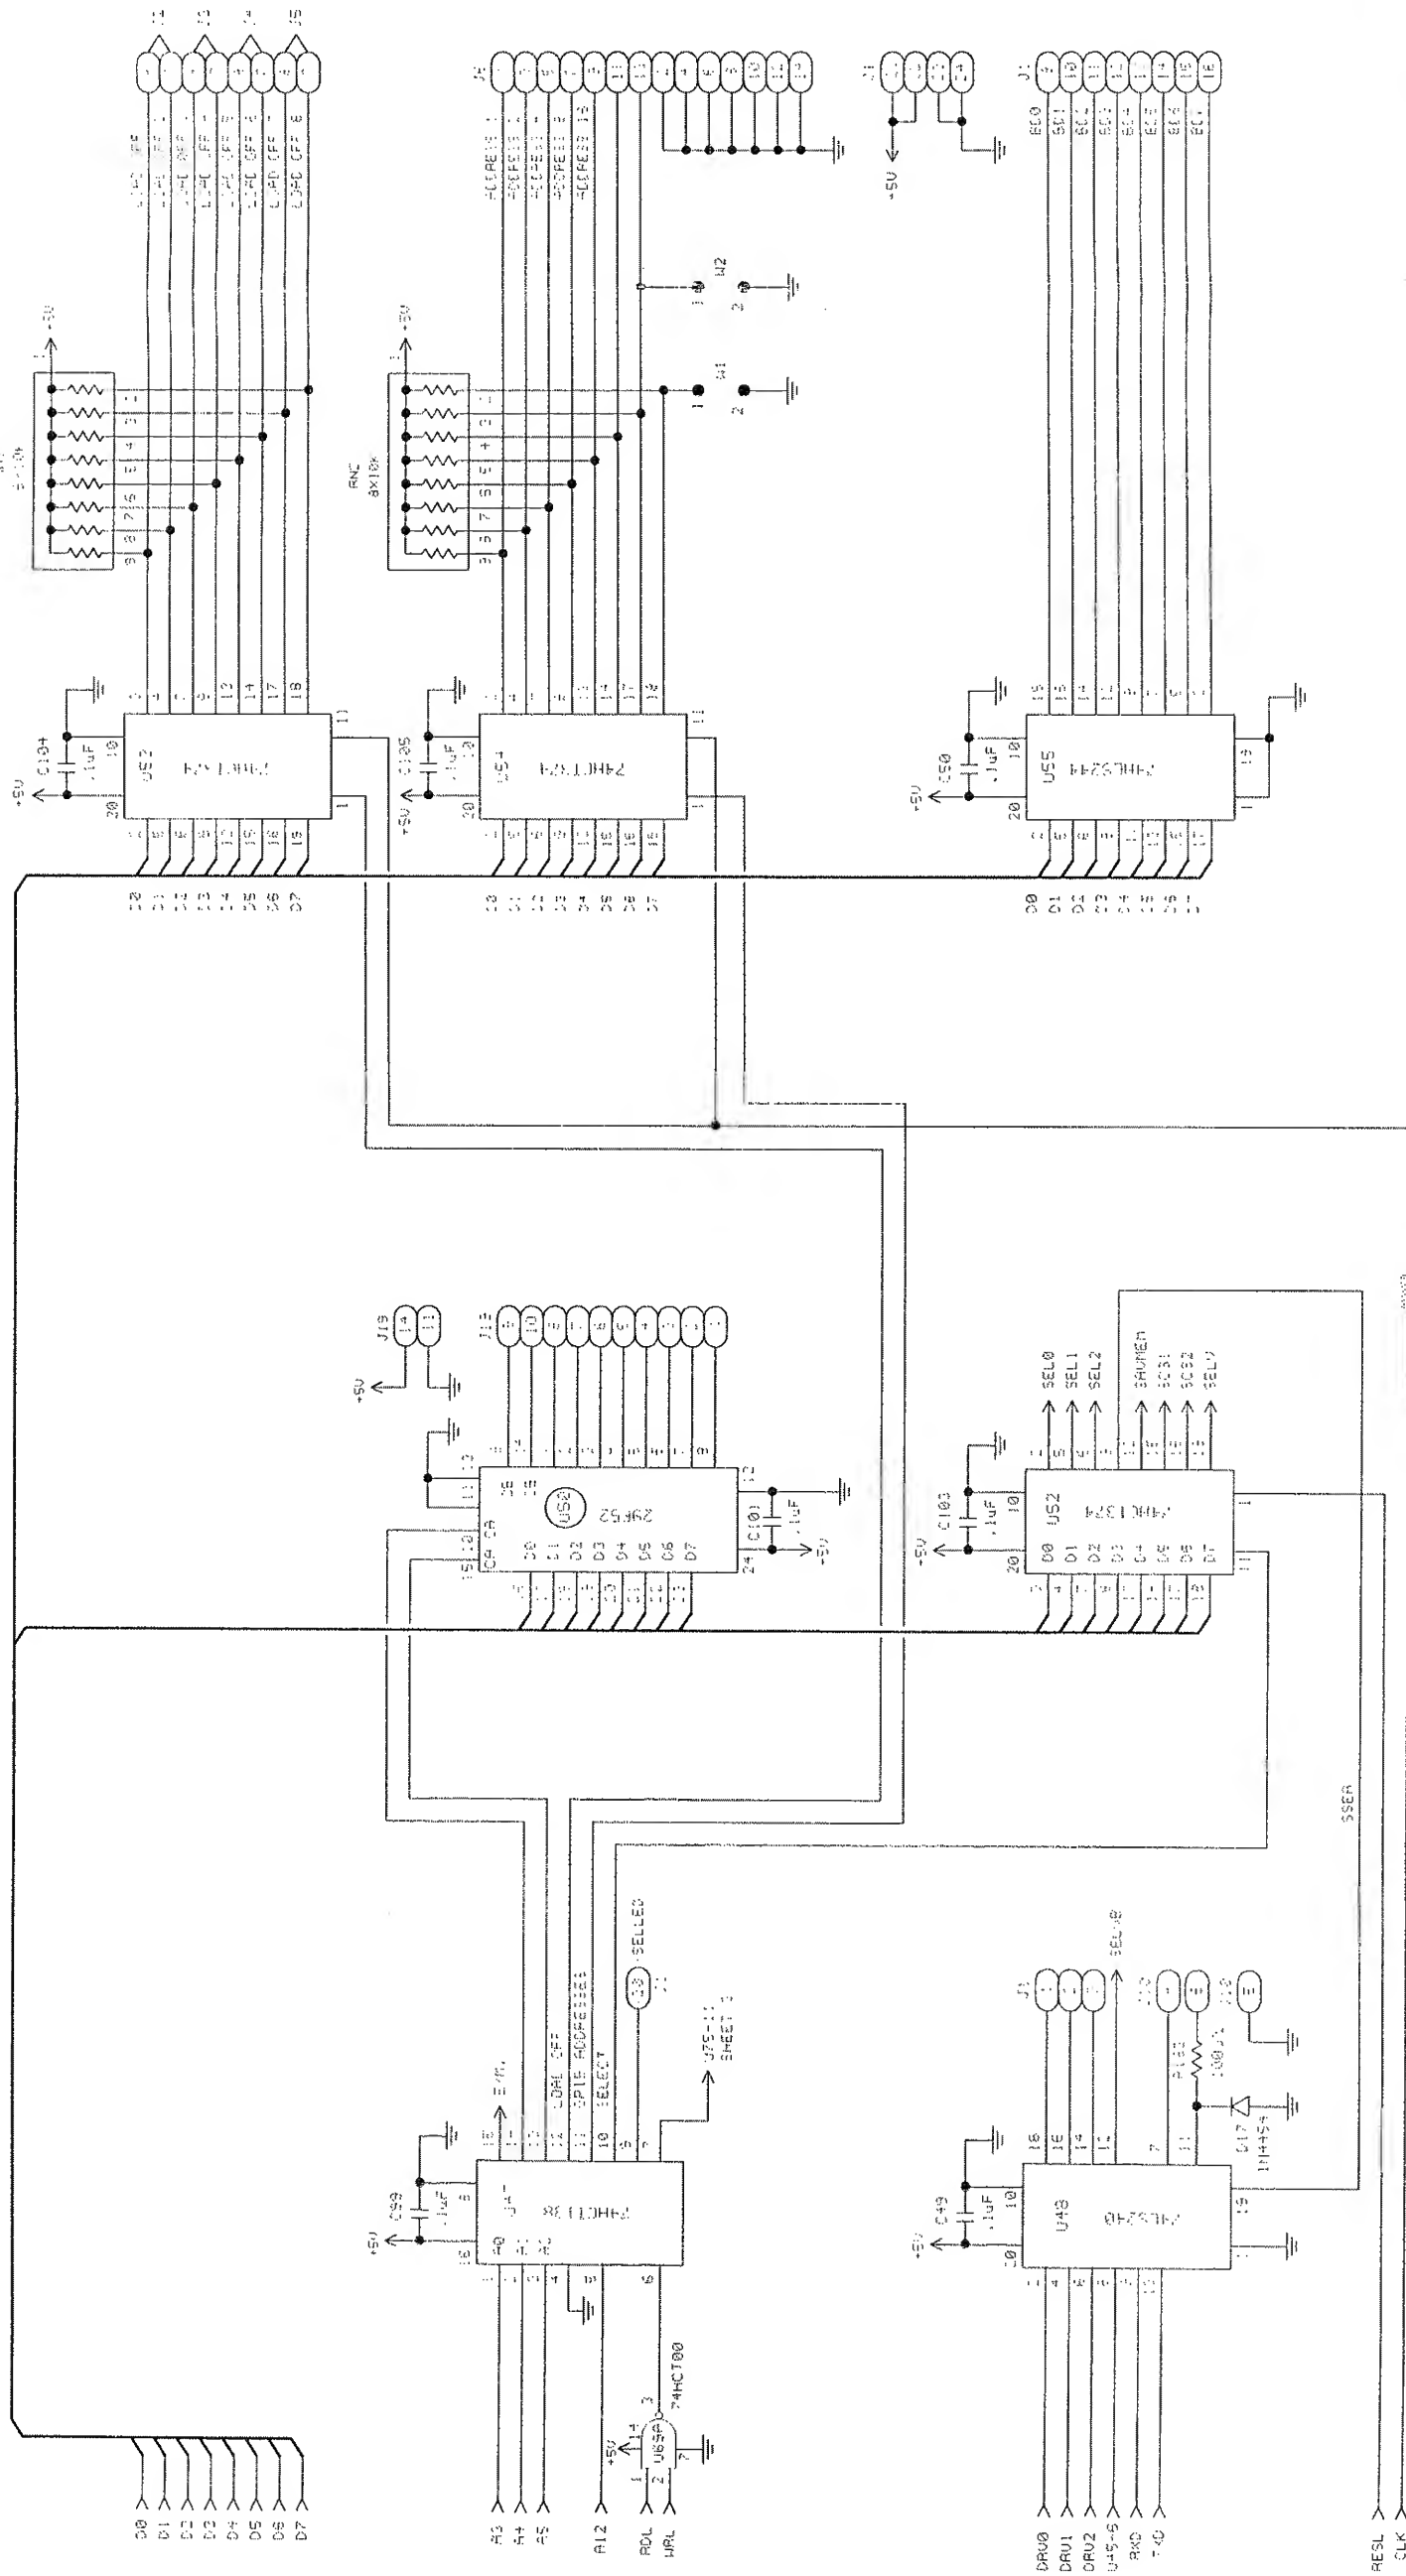



LAST REF. DES. USED	REF. DES. NOT USED	ANALOGIC	PERECOV, MA. 01950
CODE IDENT NO.	SIZE	18100	D
SCALE: NONE	FILE NAME: 1410622.SCH	SHEET 2 OF 8	1

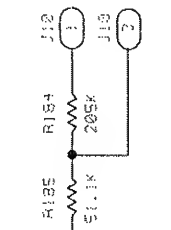



ANALOGIC 		PEABODY, MA. 01960	
CODE IDENT NO.	SERIE	REG	
1B100	D	5-14206	1
SCALE: NONE		FILE NAME: 14206S3.SCH SHEET 3 OF 9	

THIS DRAWING IS THE PROPERTY OF ANALOGIC CORPORATION. IT IS TO BE USED ONLY FOR THE PROJECT AND FOR THE QUANTITY SPECIFIED. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. WITHOUT THE WRITTEN PERMISSION OF ANALOGIC CORPORATION.


REV	DATE	BY	CHK	APP
1	5-14-86			

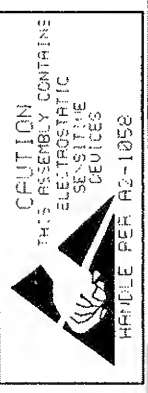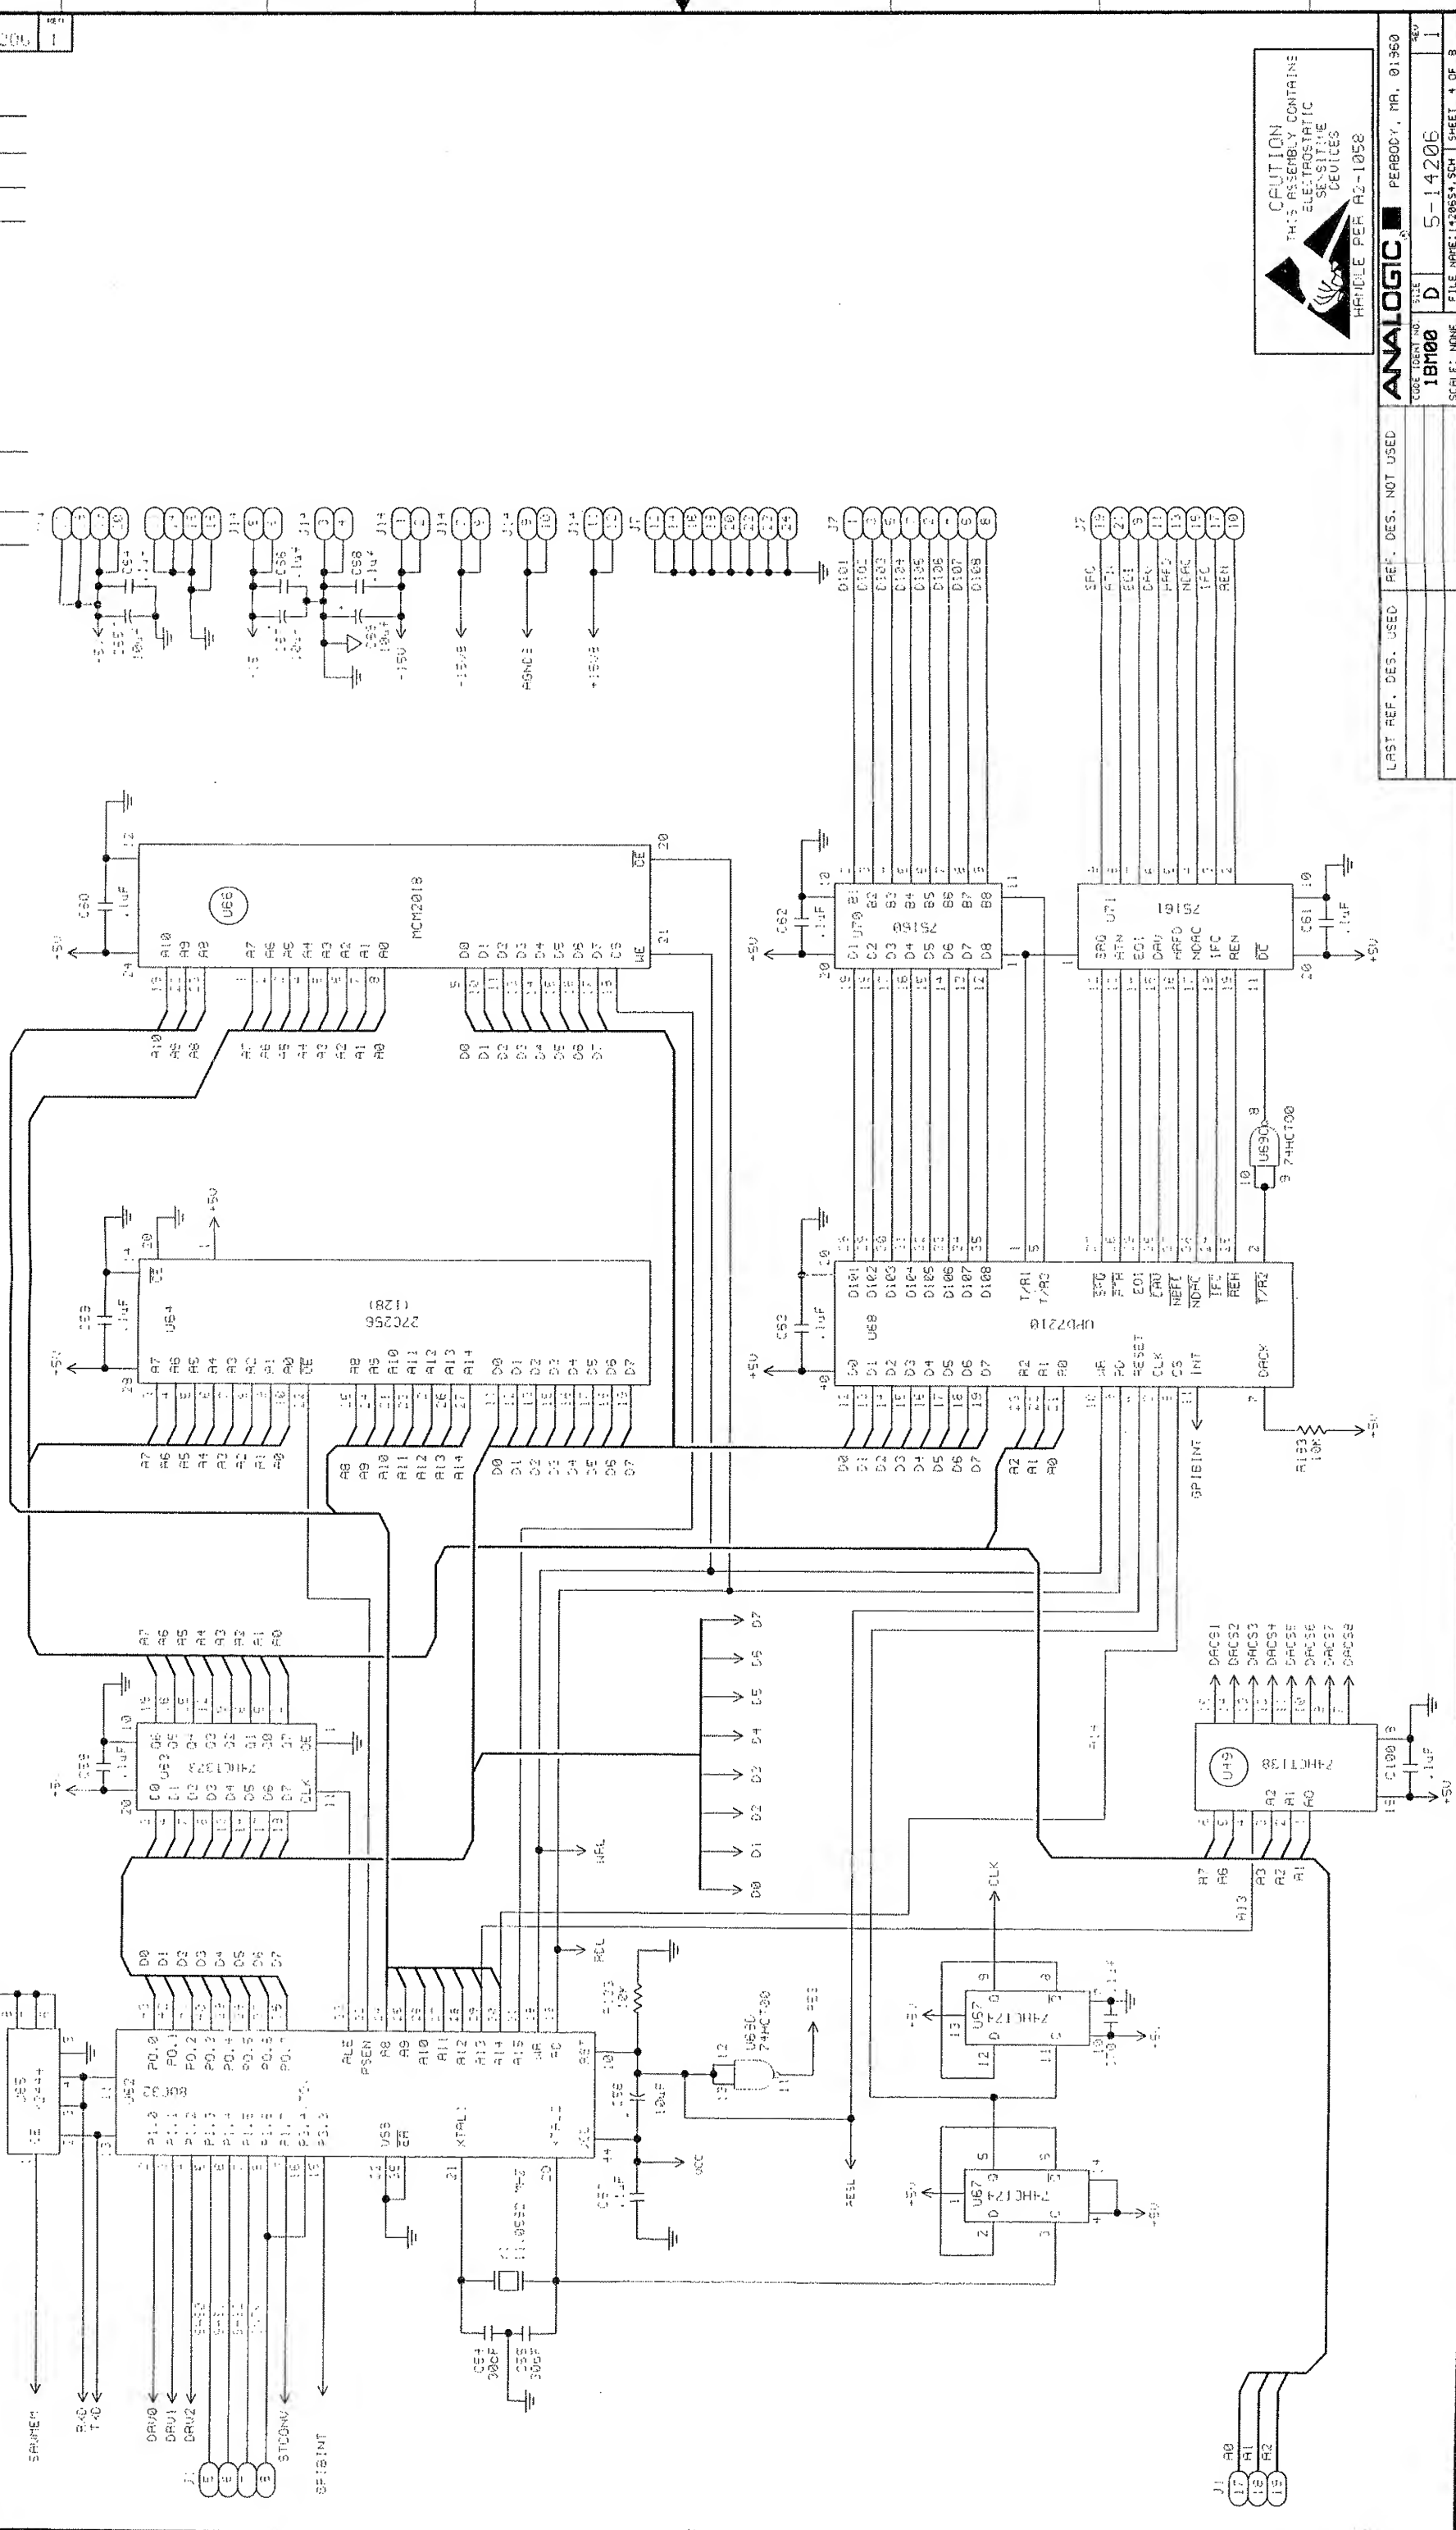

LAST REF. DES. USED	REF. DES. NOT USED	ANALOGIC	PERBODY, MA. 01960
18M00	D	5-14206	1
SCHEM. NO.	FILE	DATE	SHEET 4 OF 8

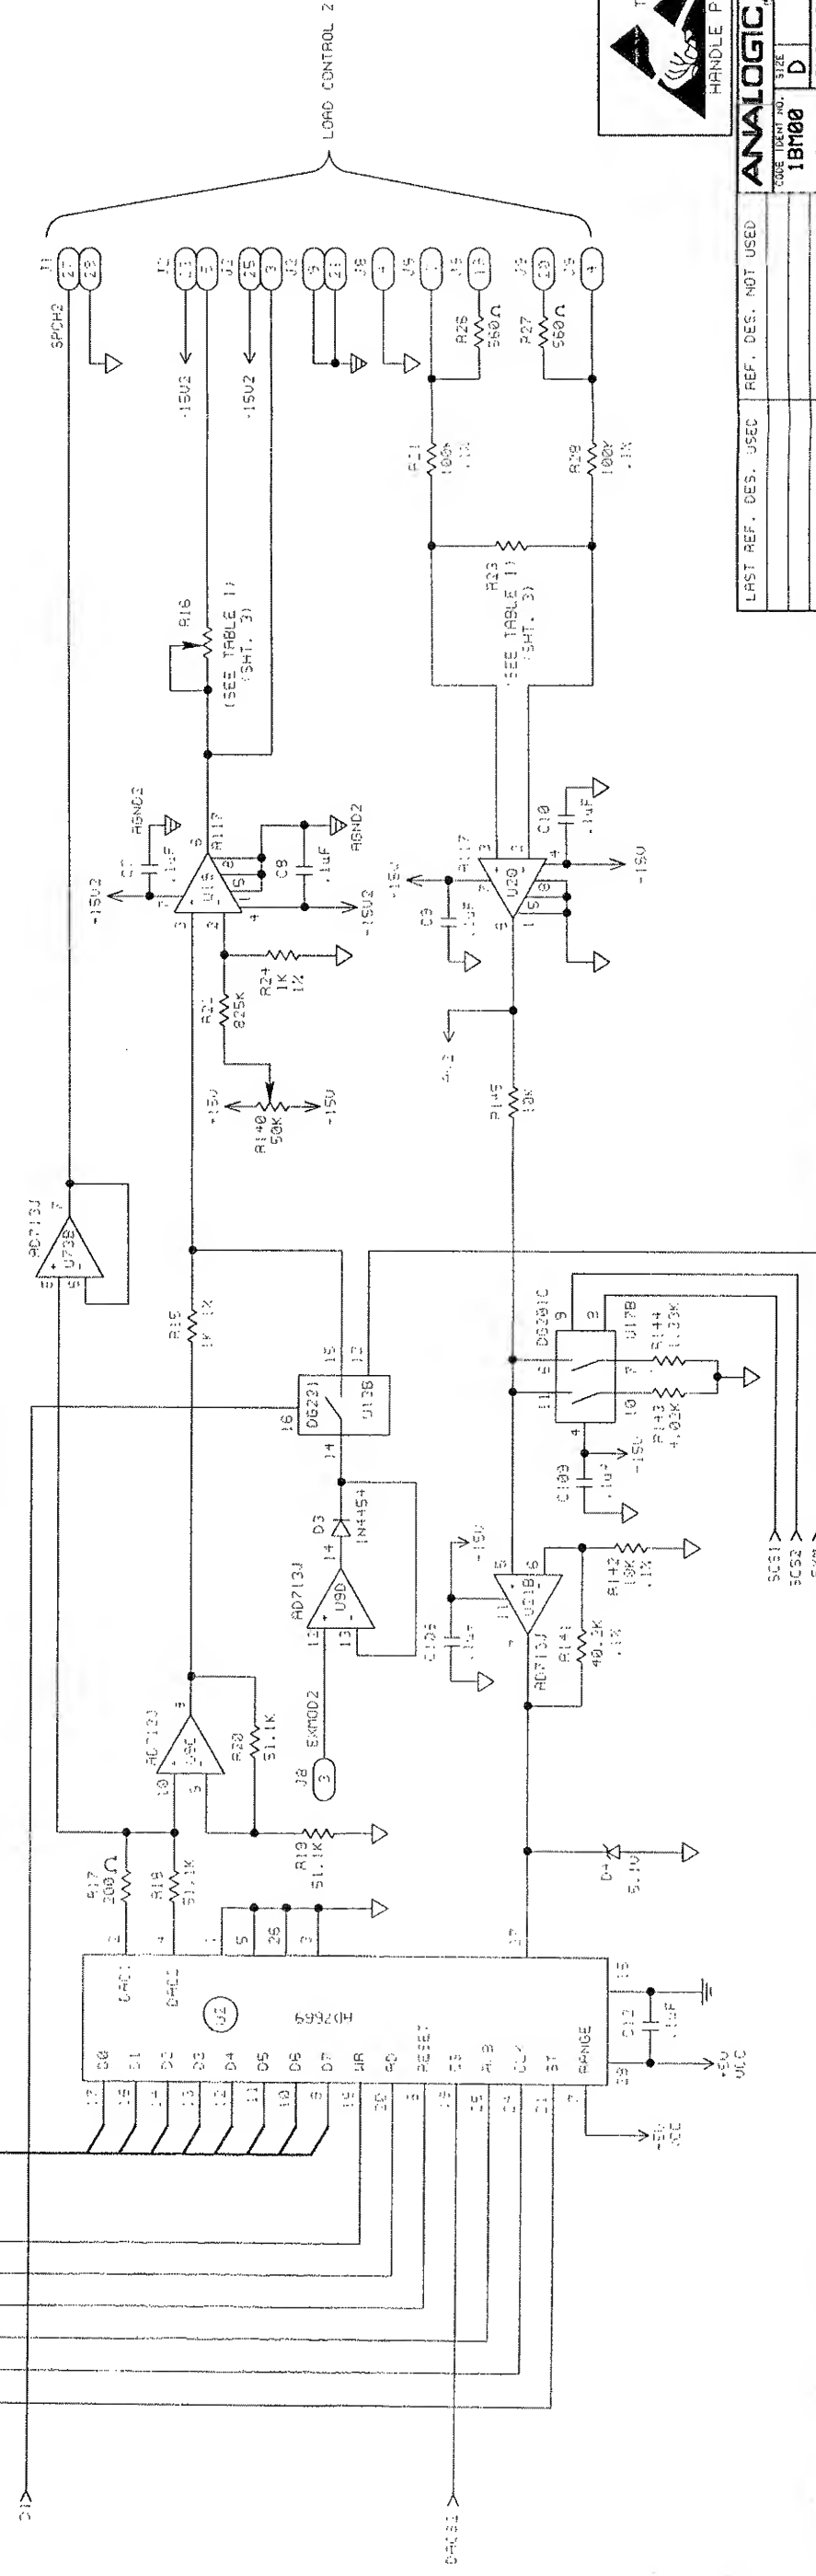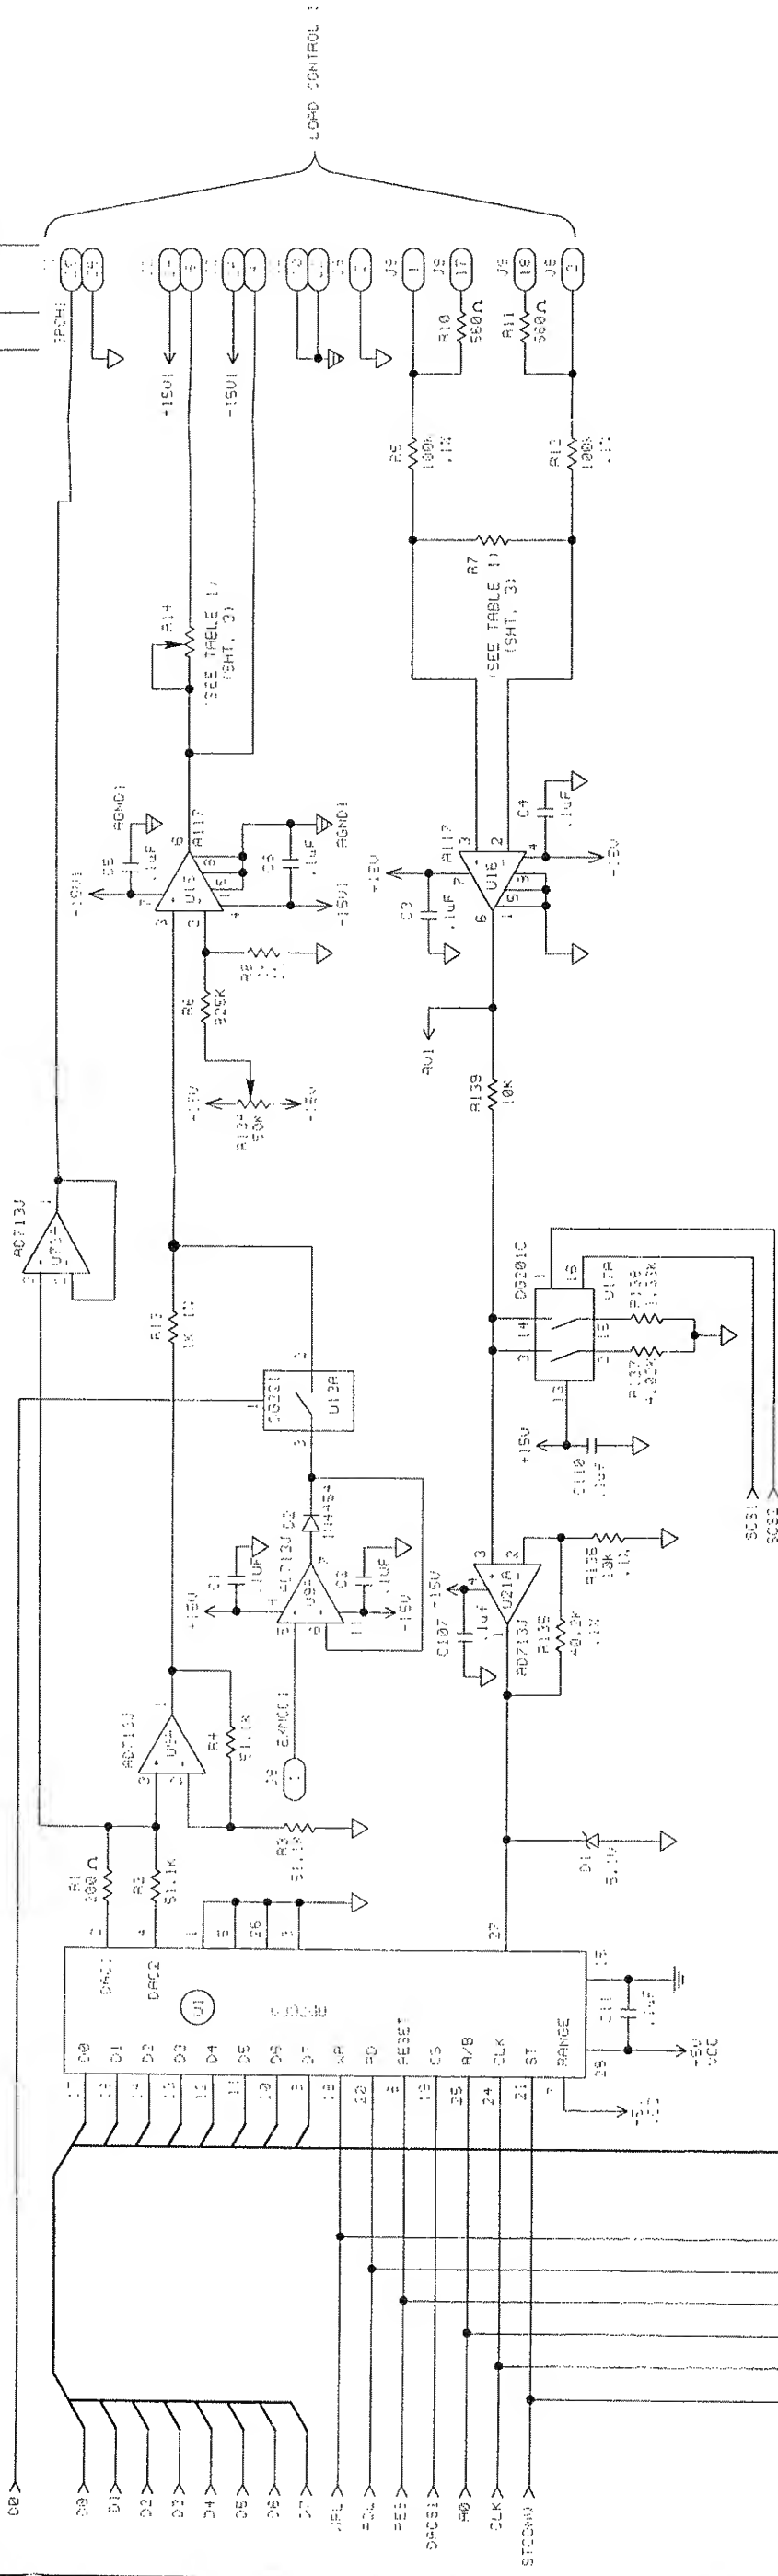[illegible]

ANALOGIC 		PEREDDY, MR. 01360	
CODE IDENT NO.	SIZE	REV	
1Bm00	D	5-1420E	1
SCALE: NONE		FILE NAME: 140555.SCH SHEET 5 OF 8	


 


CODE IDENT NO. 1B100	SIZE D	REC 1
SCALE: NONE		FILE NAME: 1420657.SCH SHEET 7 OF 8

THIS DOCUMENT AND THE INFORMATION CONTAINED HEREIN ARE UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE. DATE 05-14-2006 BY 60322 UCBAW/STW

5-14206

REV	DATE	BY	APP'D
1	05-14-2006	UCBAW/STW	

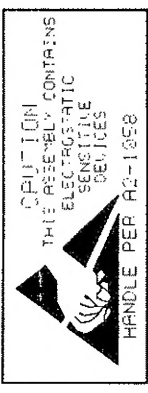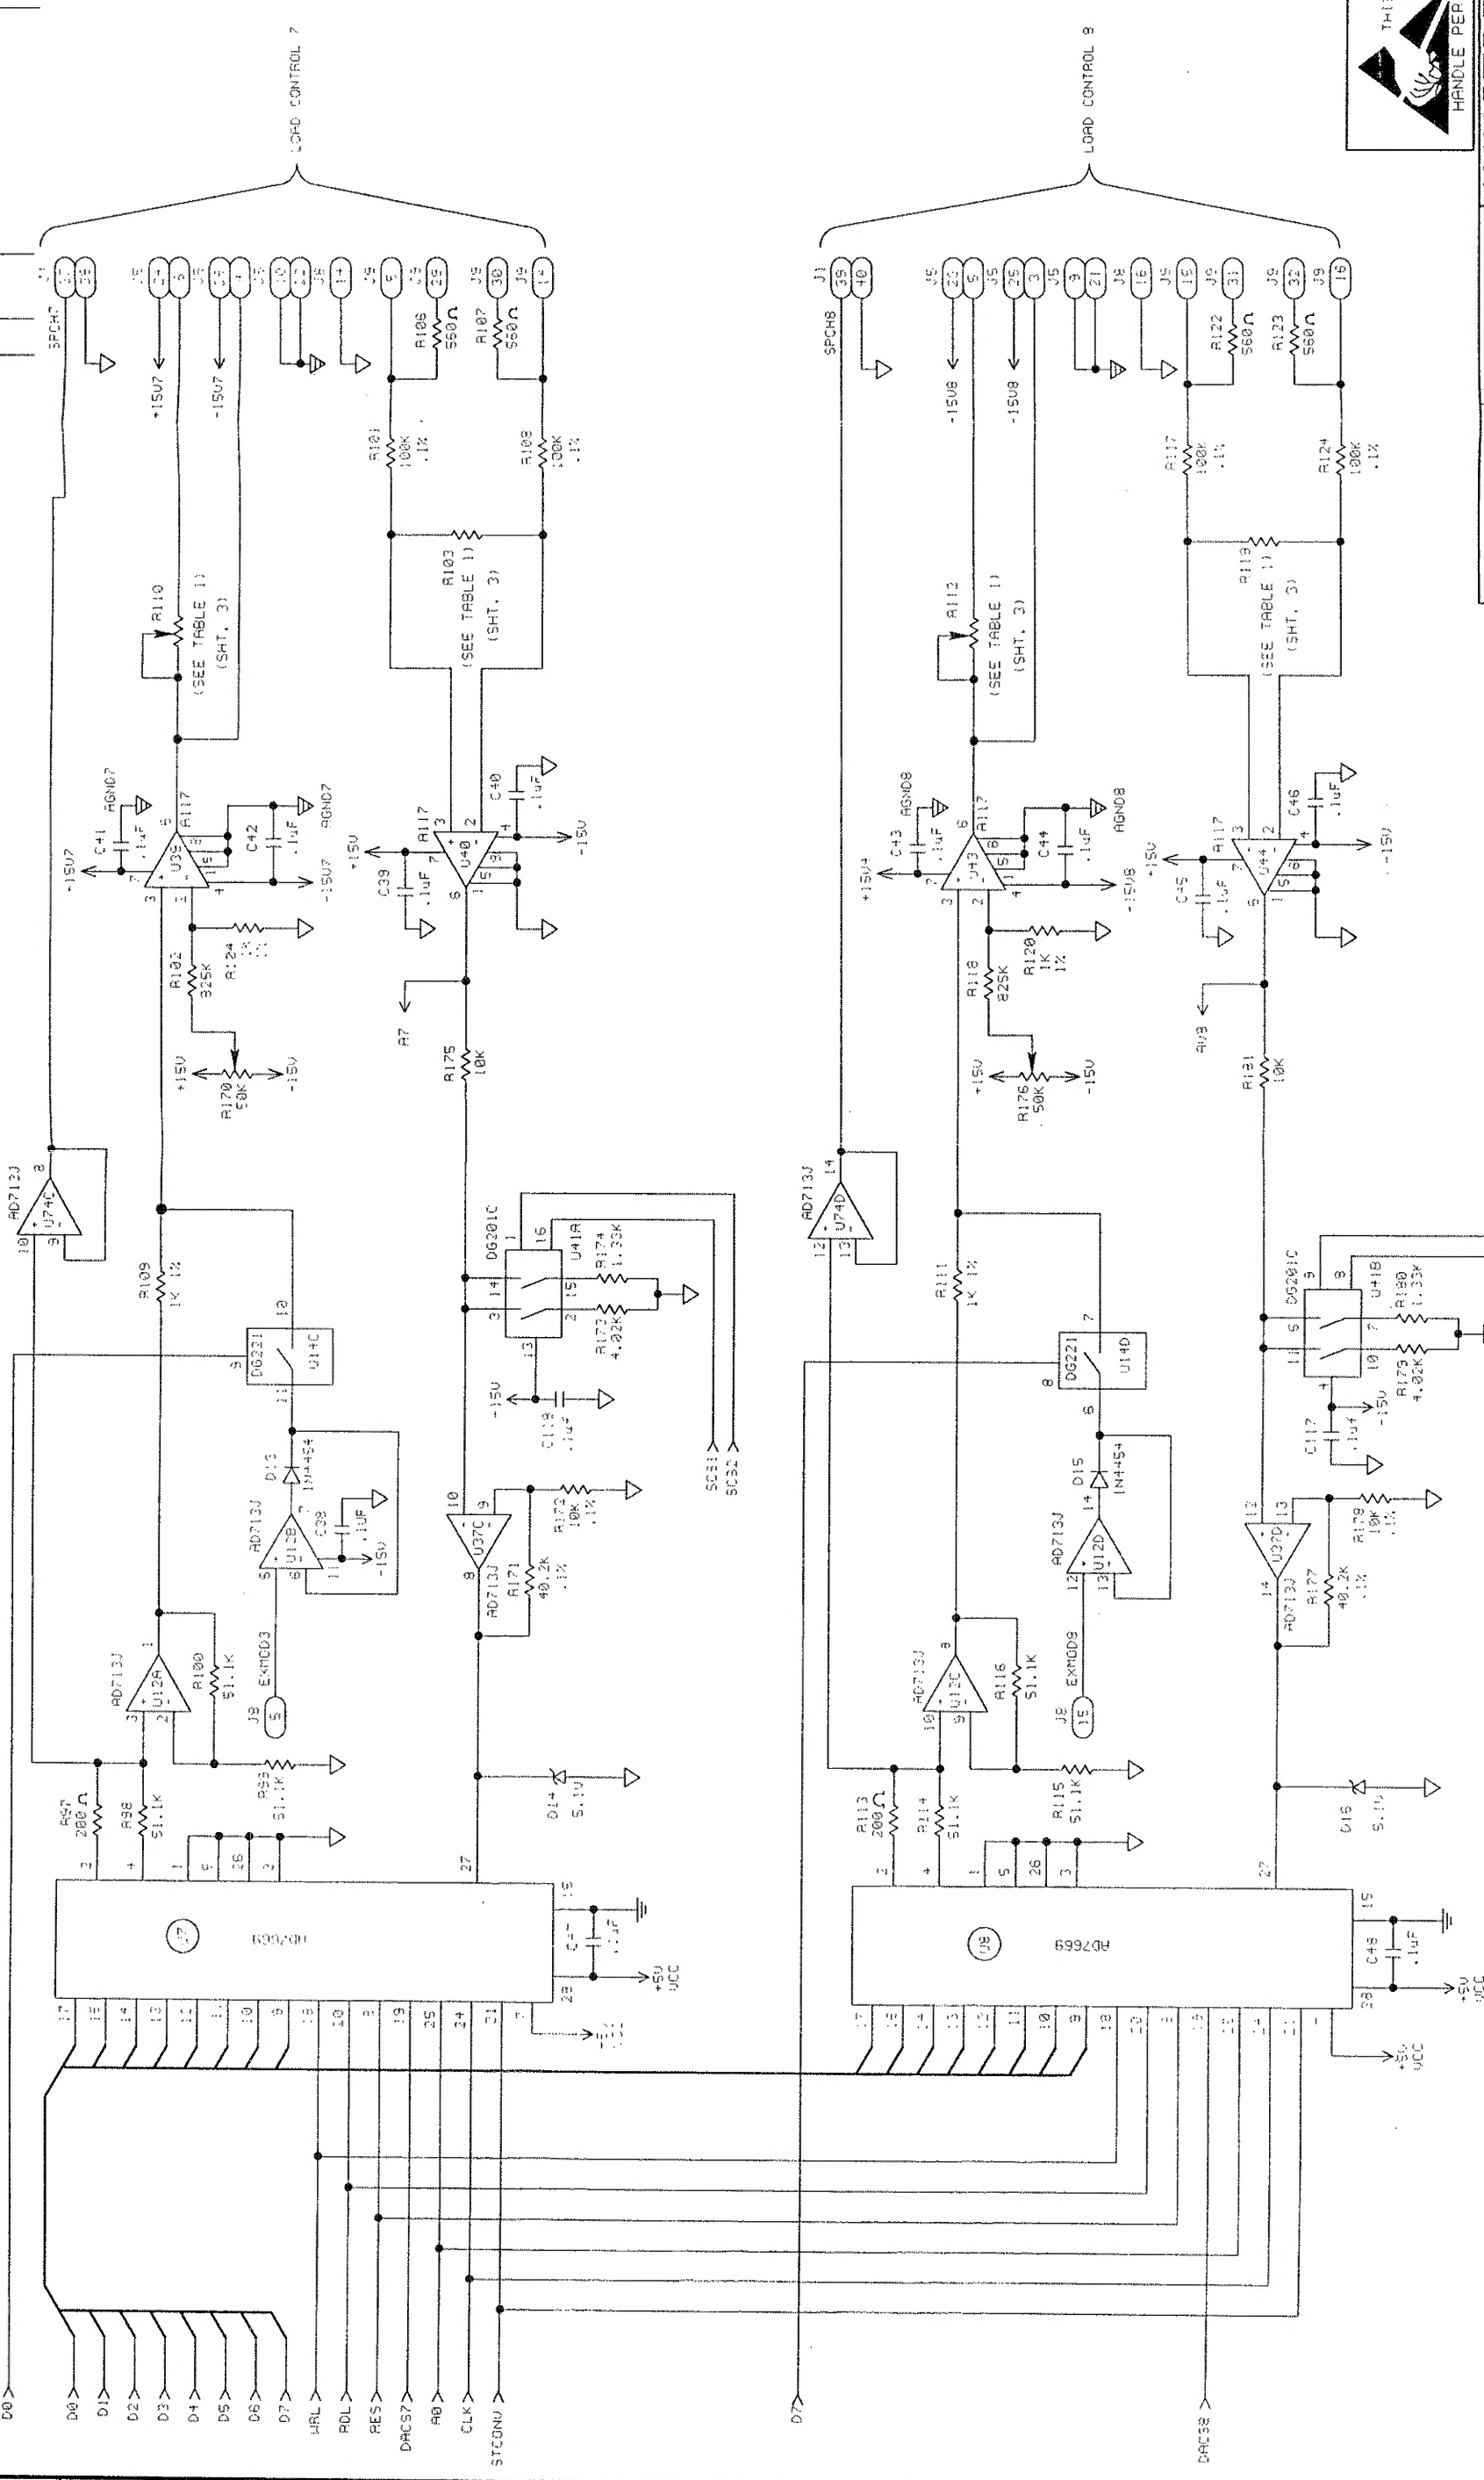

LAST REF. DES. USED	REF. DES. NOT USED	ANALOGIC	PERBODY, MR. 01960
CODE IDENT NO.	SIZE	18M00	D
SCALE: NONE	FILE NAME: 1420638.SCH	SHEET 8 OF 8	5-14206

Analogic Corporation
8 Centennial Drive
Peabody, MA 01960-7987, USA
(978) 977-3000
Fax: (978) 532-8913
1-800-237-2200

ANALOGIC ■
*The World Resource
for Precision Signal Technology*

Printed in the U.S.A.
© Analogic Corporation
Part Number: 16-400698 REV. 0
5/98